




**ECOMINI**

MANUALE DI ISTRUZIONE

INSTRUCTION MANUAL

使用手册

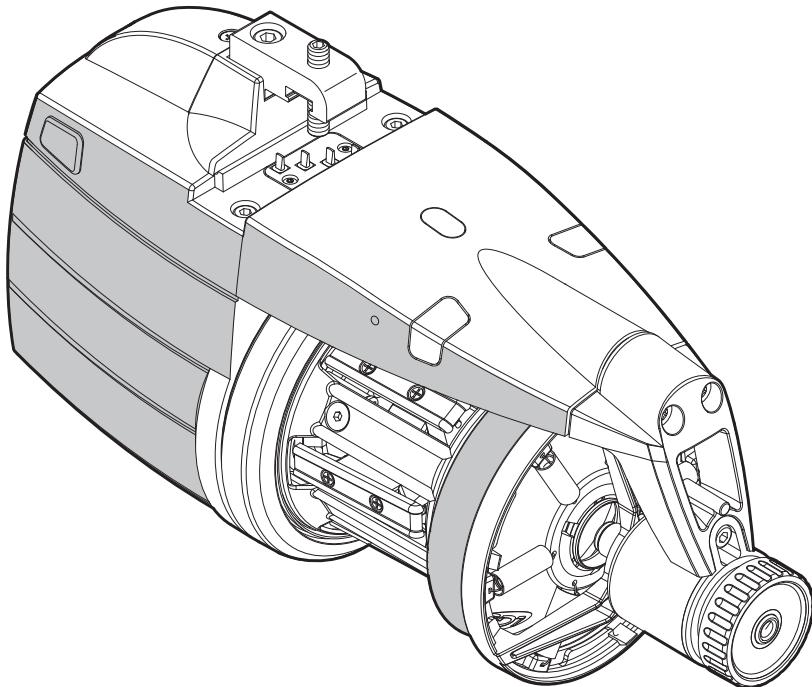

CE | UK  
CA

ALIMENTATORE DI FILO A SPIRE SEPARATE

YARN ACCUMULATOR WITH SEPARATE COILS

分离线圈导纱器

**ISO 9001**

**BUREAU VERITAS**  
**Certification**



Scope of supply: Design, manufacture and after sales service of yarn feeders,  
measuring winders, stands, creels and oil systems for textile machinery.

TRADUZIONI DELLE ISTRUZIONI ORIGINALI.  
TRANSLATION OF THE ORIGINAL INSTRUCTIONS.  
原始使用说明的翻译.

L.G.L. Electronics is gratified by your choice  
and thanks you for the preference

**ECO<sup>MINI</sup>**  
**yarn feeder**  
**INSTRUCTION MANUAL**

ISSUED BY:

Service

Manager



Date: 04/11/2024

APPROVED BY:

Technical

Manager



Date: 04/11/2024

# WARNINGS



- 1) Power down the yarn feeder's power supply box mains switch before beginning any power supply hook-up, maintenance or part replacement operations.



- 2) During standard machine operation, the yarn feeder may suddenly start up without prior warning.

**CAUTION: the orange lights do not signal that the yarn feeder is ON, but that the feeder has gone into an alarm mode. Therefore, during standard operation they should be OFF.**

- 3) Before yarn feeder start-up, inspect it physically for damage (check the flywheel/the eyelet/all moving parts).

Wear Personal Protective Equipment (gloves, shoes) during transportation and installation of the feeders and the power supply kit, if any, to avoid crushing hazards in the event of a fall.

- 4) Strictly avoid touching any moving part during feeder operation.

Do not wear clothes and clothing accessories that are likely to get caught in the moving parts. Gather up long hair.

- 5) Lubricants may be used to make the yarn slide more easily. The user must refer to the Material Safety Data Sheet of the products used. Keep the feeder clean.



- 6) Only use the original L.G.L. Electronics spare parts and accessories.

- 7) Any repairs to the feeder's electronic parts must be performed by appropriately qualified personnel, regularly authorised by L.G.L. Electronics accordingly.

- 8) Yarn feeders that are moved from warehouse storage into a warmer knitting mill environment may develop condensation; please wait until they are completely dry before connecting them up. Failure to do so may damage the electronic components.

- 9) Never pick the yarn feeder up by its yarn spool body or by its tensioning unit.

# WARNINGS

## **ADVICE TO ALWAYS KEEP THE FEEDER IN PERFECT WORKING ORDER AND EXTEND ITS SERVICE LIFE.**

For an always satisfying performance of the yarn feeder over the years, we deem it advisable to provide you with some simple tricks:

1. At the time of installation, passing from the store to the warm knitting environment, Condensation may form on a yarn feeder that has been stored in cold places when this is brought into a warm area.  
Wait until this is completely dry before connecting it, otherwise the electronic components could be damaged.
2. Water and dampness may harm the electronic parts of the feeder. Operating the yarn feeder for long time periods in extremely damp environments (dampness exceeding 80%) or using water-impregnated threads might quickly compromise the electronic cards. Moreover, the feeder shall not be cleaned with water or similar substances.
3. Machines working in environments featuring a lot of dust require increased maintenance. By prevent the knitting environment clean, you avoid residual dirt and dust from compromising the performance of the machine by stressing the moving parts. The latter are protected, but the accumulation of dust might result in a more difficult movement and, as consequence, in early wear-and-tear.
4. We suggest storing feeders that are not used for long time periods in the special polystyrene boxes, which ensure the best storage.
5. When the yarn feeder is being loaded, use the special heddle tool. Do not use other tools, especially if made from metal, as the inlet sensor might be damaged, along with any outlet brakes.

# INDEX

<b>1</b>	<b>GENERAL FEATURES</b>	<b>8</b>
1.1	Main parts – Control and adjustment points	8
1.2	Overall dimensions	9
1.3	Intended use – Technical and operational features	10
1.4	Handling and storage instructions	11
1.5	Input feeler	11
1.6	Optical output sensor	12
1.7	Yarn spool body winding reserve control feeler	12
1.8	Yarn output detection feeler	13
<b>2</b>	<b>INSTALLATION AND START-UP</b>	<b>14</b>
2.1	Yarn feeder installation and start-up (AC version)	14
2.1.1	To be checked before switching power on (AC version)	17
2.2	Yarn feeder installation and start-up (DC version)	20
2.2.1	Checklist before power on (DC version)	25
2.2.2	CAN-BUS cables connection	26
2.3	The address kit	27
2.4	Dip-switch settings	30
2.5	AC version transformer kit	32
2.6	Large diameter knitting machines (only DC version)	33
2.6.1	KLS: automatic output stop motion system	33
2.6.2	Button for the learning procedure located on the KYC box	34
<b>3</b>	<b>THREADING AND ADJUSTMENTS</b>	<b>36</b>
3.1	Threading yarn feeder with the twm tension modulator	36
3.2	Speed adjustment	37
3.3	Tensioning adjustment	37
<b>4</b>	<b>MAINTENANCE OPERATIONS</b>	<b>38</b>
4.1	Dismounting the yarn spool body	38
4.2	Replacement of the main electronic control board	41
<b>5</b>	<b>COMPONENT REPLACEMENT</b>	<b>42</b>
5.1	Replacement of the TWM tensioner	42
5.2	Replacement of the bristle brush	45

# INDEX


<b>6</b>	<b>ATTIVO</b>	<b>48</b>
6.1	Attivo electronic tensioner	48
6.2	Offset	52
<b>7</b>	<b>APPLICATION RANGE</b>	<b>57</b>
7.1	TWM Tension modulator application ranges	57
<b>8</b>	<b>APPLICATION RANGE</b>	<b>59</b>
8.1	Conversion table for the various yarn count systems	59
<b>9</b>	<b>TROUBLE SHOOTING</b>	<b>60</b>
9.1	During installation	60
9.2	During operation	60
<b>10</b>	<b>APPLICATION RANGE</b>	<b>61</b>

# 1 - GENERAL FEATURES

## 1.1 MAIN PARTS - CONTROL AND ADJUSTMENT POINTS

### Main Parts:

1 • MOTOR	6 • OPTICAL OUTPUT SENSOR
2 • TOP PANEL	7 • POWER CABLE CONNECTION
3 • FLYWHEEL	8 • MAIN ELECTRONIC CONTROL BOARD
4 • YARN SPOOL BODY	9 • WINDING RESERVE CONTROL FEELER
5 • OUTPUT TENSIONER UNIT	10 • INPUT FEELER

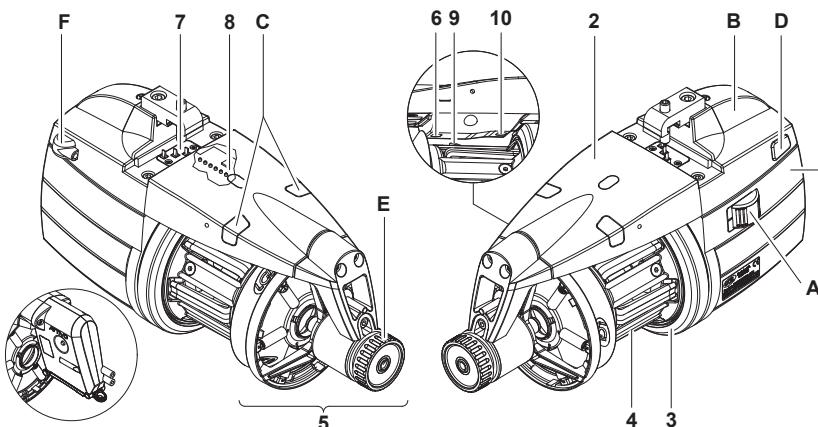

For further details concerning the ATTIVO electronic tensions, please go to chapter 6



CONTROLS / ADJUSTMENTS		FUNCTION
<b>A</b>	<b>O - I SWITCH</b>	• Switches the yarn feeder ON and OFF.
<b>B</b>	<b>SERIAL COMMUNICATION PORT</b>	• Enables Pocket and PC interfacing.
<b>C</b>	<b>SIGNAL LAMPS</b>	• If yarn feeder is turned on and there are no malfunctions, they will not light up. • They will light up if any malfunction arises. (consult paragraph "Trouble shooting").
<b>D</b>	<b>DIP SWITCH</b>	• Enables adjustment of the optical sensor's sensitivity range, reverse the direction of rotation, self-calibrate magnetic sensors and perform the termination of the serial bus.
<b>E</b>	<b>ADJUSTING TWIST-KNOB</b>	• Enable adjustment of the outbound yarn tensioning.
<b>F</b>	<b>THREE-WAY CONNECTOR</b>	• Enables connection of an output yarn feeler.

# 1 - GENERAL FEATURES

## 1.2 OVERALL DIMENSIONS



### ECOMINI featuring the TWM tension modulator

Weight 2.2 Kg

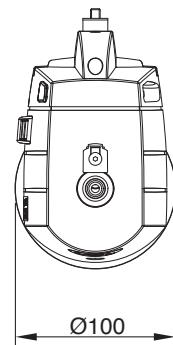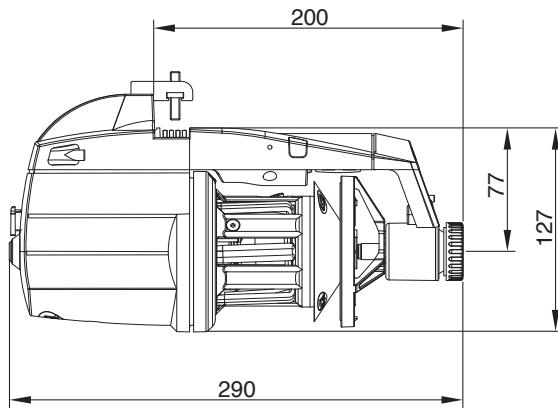

### ECOMINI with ATTIVO electronic tensioner

Weight 2.3 Kg

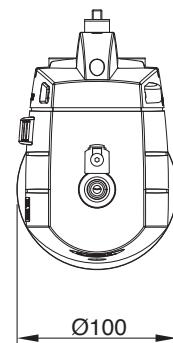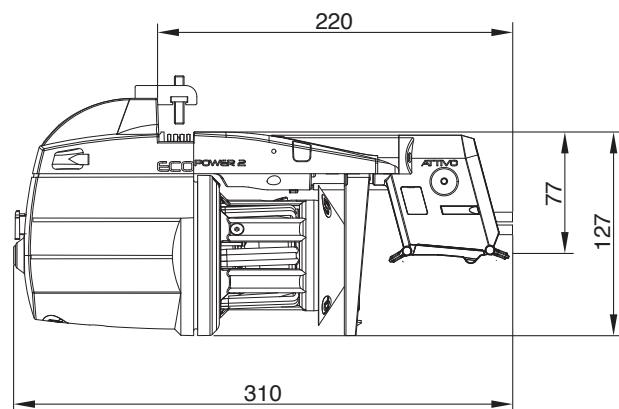

# 1 - GENERAL FEATURES

## 1.3 INTENDED USE – TECHNICAL AND OPERATIONAL FEATURES

### Intended Use:

The ECOMINI is a yarn feeder featuring **separate coils**, suitable for all types of knitting machines or for textile machines requiring yarn feed-in with constant tension. Optimised operation is provided with yarn counts ranging from **800 den** (the thicker yarn counts) down to **5 den** (fine yarn counts).

### IMPROPER uses

Improper uses are all those uses which are not expressly indicated among the design uses, namely:

- Working of yarns other than those specified
- Power supply of the machine not matching the specified value
- Use of the machine in an explosive atmosphere.

### Operational features:

- Automatic speed adjustment designed to cover the machine's yarn quantity requirements.
- Spool body winding reserve control by means of a magnetic feeler system.
- Yarn feeder and machine stop function if no yarn is detected at the feeder's yarn input (broken yarn or empty yarn bobbin).
- Kit KLS:  
Feeder and machine stop function when no yarn is found on feeder outlet without using mechanical sensors (yarn broken or out of the needles).
- The option of being able to fit on various tensioning devices based on the type of yarn actually being used, at both the feeder's inlet and outlet.
- Either vertical set-up or horizontal set-up assembly option, selectable based on requirements.
- Real-time detection and display function of the yarn consumption related to each machine feed
- **ATTIVO** electronic tensioner (optional). The operator sets the desired output tension, and the system will maintain it, to avoid all tension changes depending on the yarn, the bobbin and the like issues.

### Technical specifications:

- Power supply by means of a direct connection with the machine, or through a power supply box that is supplied separately by L.G.L. Electronics.

Power supply voltage data: **V = 42-48 VAC three-phase Hz = 50/60 (AC version)**  
**V = 57 VDC (DC version)**

- Automatic yarn input speed control provided up to a maximum of **1000 m/min.**
- Coil separation feature fixed at **1 mm (STD); 2 mm (Z1).**
- Permanent magnet synchronous motor.
- Motor data:

Maximum power: **35 W**

- Equivalent continuous A-weighted sound pressure level at maximum speed: **<70 dB (A)**

- Operation and storage conditions:


- Room temperature: from **+10 to +40°C**

- Maximum humidity: **80%**

# 1 - GENERAL FEATURES

## 1.4 HANDLING AND STORAGE INSTRUCTIONS


**Never pick the yarn feeder up by its yarn spool body, by its top panel or by its tensioning unit.**

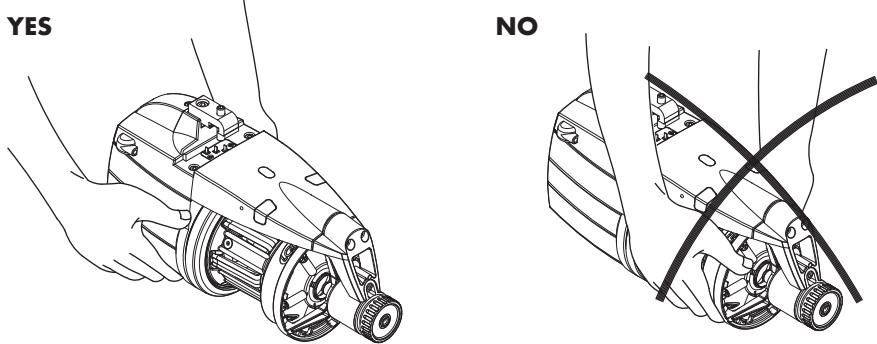

The yarn feeder is supplied in an appropriate polystyrene casing; please store the casing for use during any future handling.

## 1.5 INPUT FEELER

The yarn feeder features an input feeler that provides the following function:

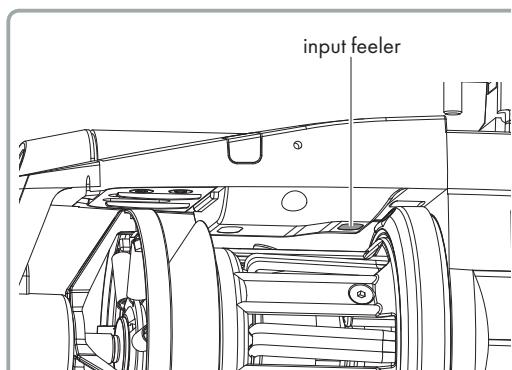

- **“Machine stop” function:**

this function stops both the feeder and the machine if no yarn is detected at feeder input (broken yarn or empty yarn spool).


**CAUTION: the machine will not stop if the feeder comes to a halt.**

**The machine stop signal is operative only if the signal lamps are ON.**

# 1 - GENERAL FEATURES


## 1.6 OPTICAL OUTPUT SENSOR

The optical sensor featured by the yarn feeder provides automatic speed adjustment based on the quantity of yarn needed by the machine. For very fine yarn count processing (lower than 40 den), the sensor requires DIP SWITCH settings (paragraph 2.4 refers).

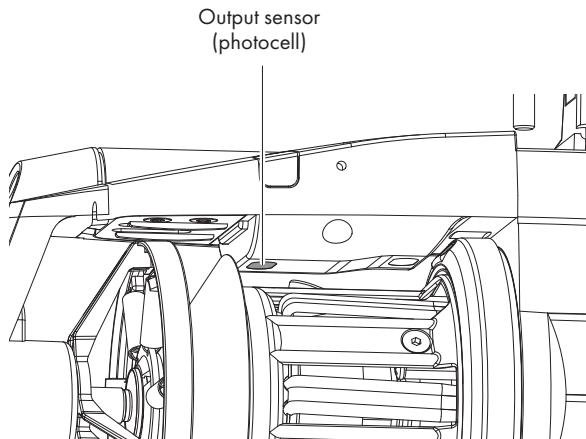

## 1.7 YARN SPOOL BODY WINDING RESERVE CONTROL FEELER


The magnetic sensor that the yarn feeder is provided with has the function of monitoring the yarn winding reserve on the spool body.

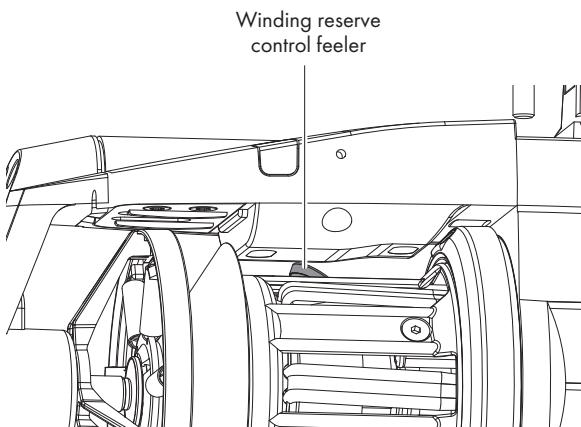

# 1 - GENERAL FEATURES

## 1.8 YARN OUTPUT DETECTION FEELER

The assembly of this detection feeler onto the feeder output, enables the machine to receive a stop signal that is relayed by the feeder when it detects output yarn snaps/breaks.

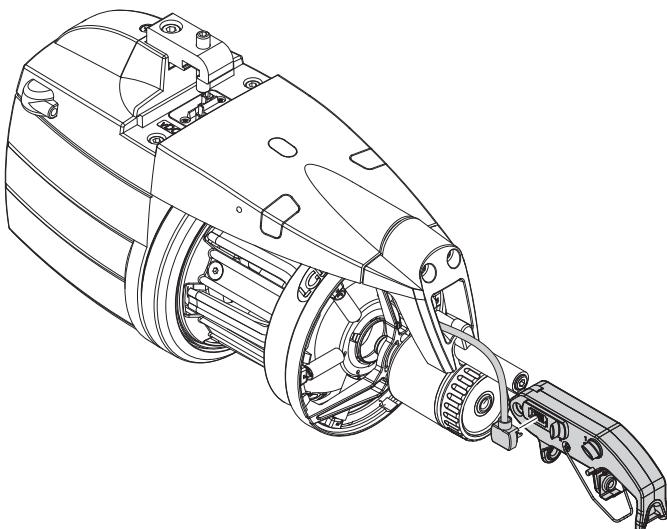

## 2 - INSTALLATION AND START-UP

**N.B.: Yarn feeders that are moved from warehouse storage into a warmer knitting mill environment may develop condensation; please wait until they are completely dry before connecting them up.  
Failure to do so may damage the electronic components.**

### 2.1 YARN FEEDER INSTALLATION AND START-UP (AC VERSION)

For installation of the yarn feeder onto the machine, proceed as follows:

#### VERTICAL SET-UP VERSION

Fix the feeder onto the appropriate support plate (**F**) and fit in the power supply flat cable (**G**) as well; tighten in grub screw (**H**) until the flat cable is punctured.


N.B.: The support ring shall be sized as follows:

- Height not less than 25mm
- Max thickness 10 mm

**IMPORTANT: To avoid damaging the electronic components, the installation sequence illustrated in the figures below must absolutely be complied with exactly.**

The brown cable (**I**) must be kept facing the signal lamps (**C**) (if the flat cable is supplied by LGL, the brown cable (**I**) can be identified by the arrows (**L**) printed on the flat cable).

**N.B.: Make sure that the support plate the yarn feeder is fixed onto is provided with an earth connection, the same goes for the 48V AC threephase power supply transformer star-connection.**


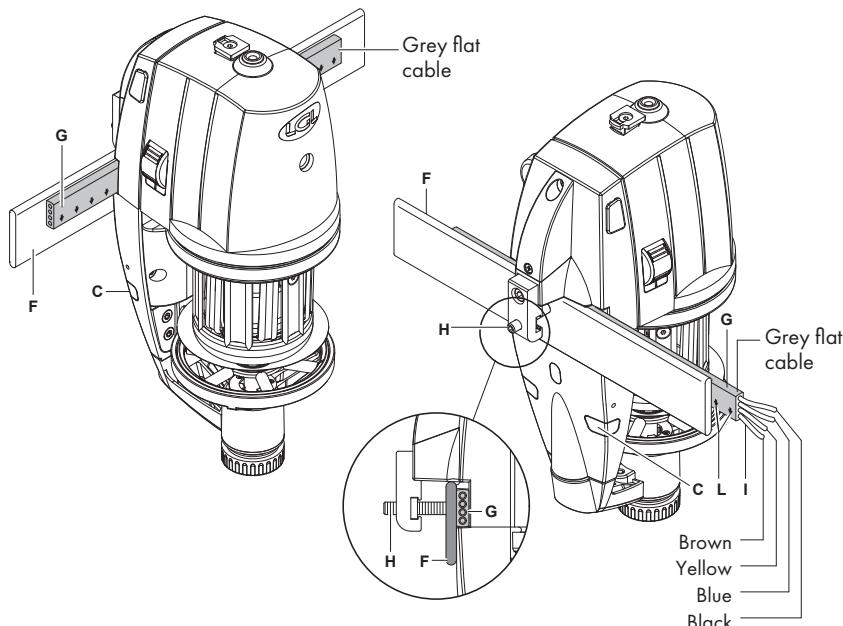


## 2 - INSTALLATION AND START-UP

### HORIZONTAL SET-UP VERSION

For installation of the yarn feeder onto the machine, proceed as follows:


- Fasten the clamp (**F**) with the screw (**G**) to the feeder; then block the clamp on the machine pipe using the grub screw (**H**) that is found in the clamp, placing the feeder with the proper inclination to operate.

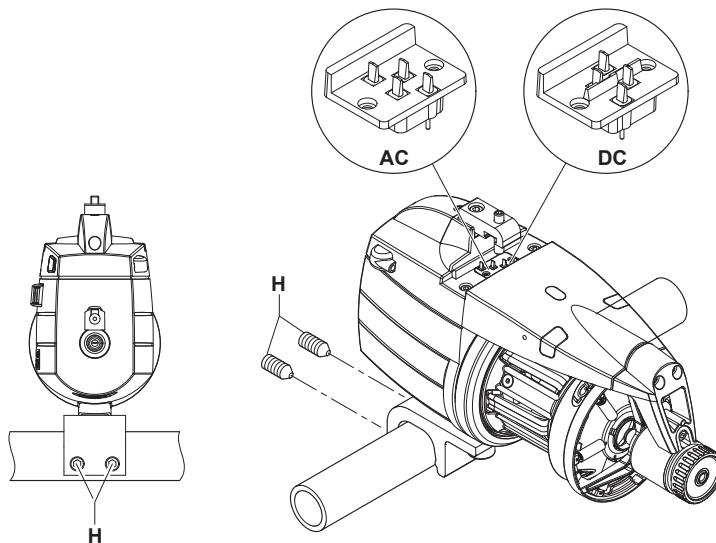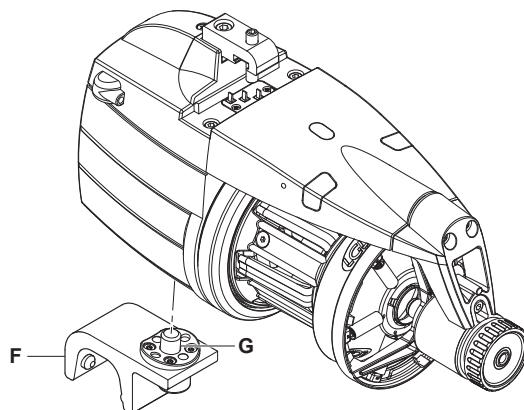

## 2 - INSTALLATION AND START-UP




- Connect up the feeders to the flat cable (**I**) by means of the appropriate locking plate (**L**) then tighten it in with screw (**M**) located on the housing.

**CAUTION: when connecting the flat cable, keep to the printed reference marks showing the exact fixing position (the arrows (**N**) must point towards the front end of the feeder).**

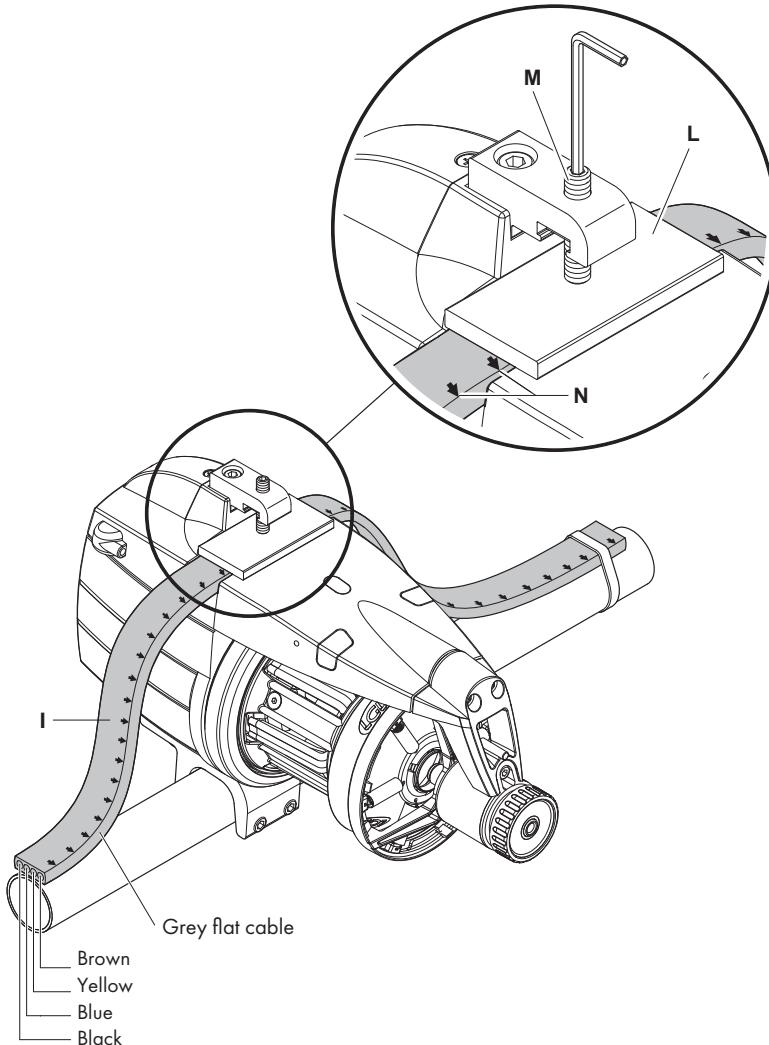


## 2 - INSTALLATION AND START-UP


### 2.1.1 To be checked before switching power on (AC version)

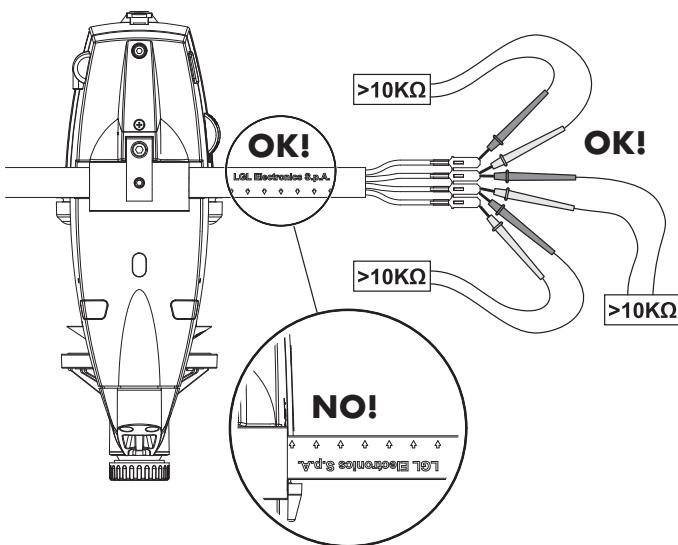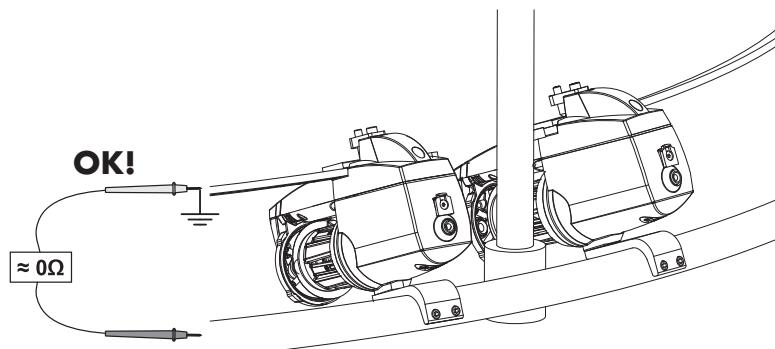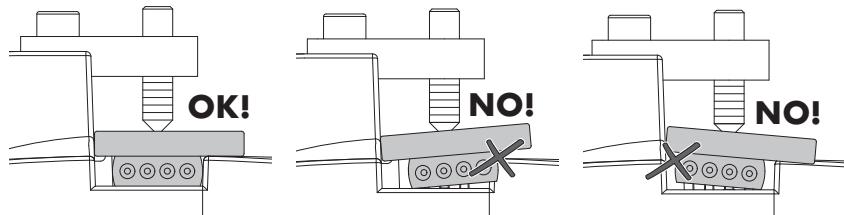

## 2 - INSTALLATION AND START-UP

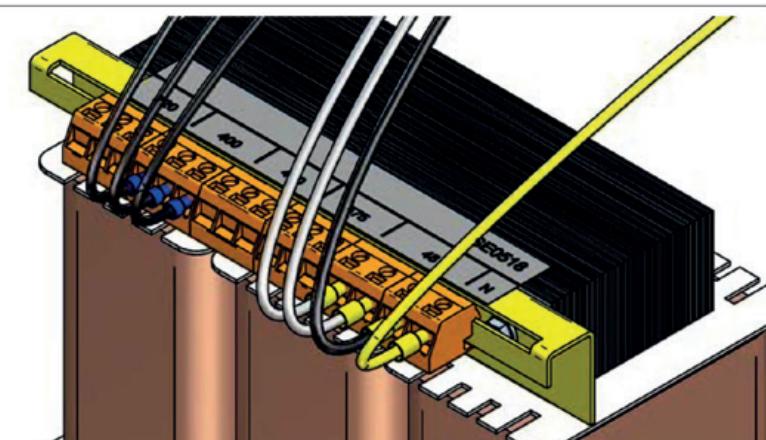


**Be sure that the transformer is connected to the correct primary voltage**

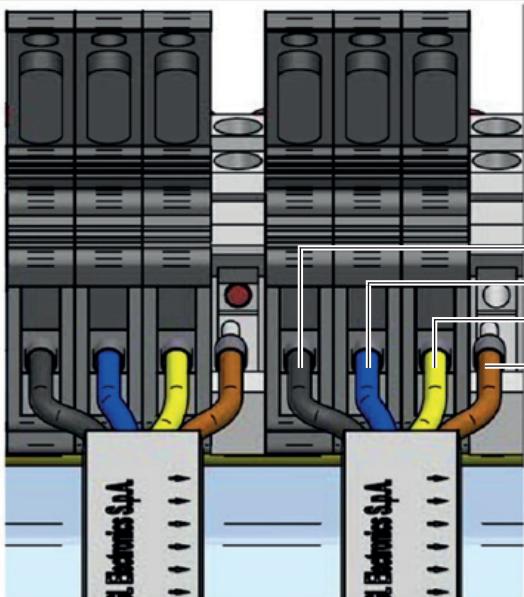

**Be sure that flat cables are connected to the transformer with the correct color sequence**

## 2 - INSTALLATION AND START-UP

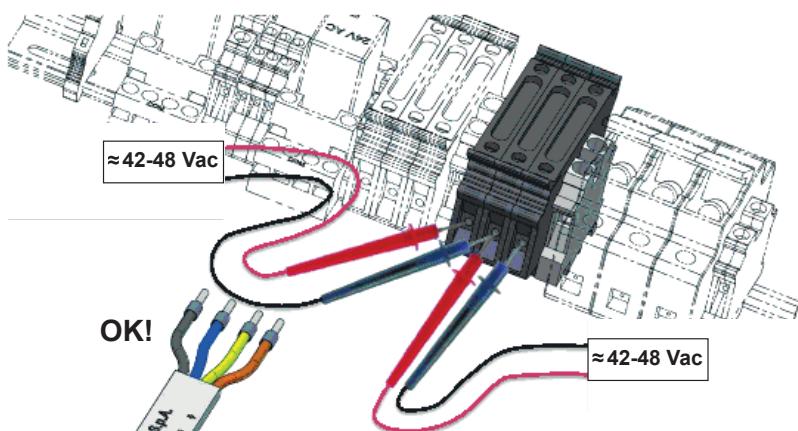

## 2 - INSTALLATION AND START-UP

### 2.2 YARN FEEDER INSTALLATION AND START-UP (DC VERSION)

For installation of the yarn feeder onto the machine, proceed as follows:

#### VERTICAL SET-UP VERSION

Fix the feeder onto the appropriate support plate (**F**) and fit in the power supply flat cable (**G**) as well; tighten in grub screw (**H**) until the flat cable is punctured.


N.B.: The support ring shall be sized as follows:

- Height not less than 25mm
- Max thickness 10 mm

**IMPORTANT: To avoid damaging the electronic components, the installation sequence illustrated in the figures below must absolutely be complied with exactly.**

The yellow/green cable (**I**) must be kept facing the signal lamps (**C**) (if the flat cable is supplied by LGL, the yellow/green cable (**I**) can be identified by the arrows (**L**) printed on the flat cable).

**N.B.: Ensure that the stand onto which the yarn feeder is fastened is electrically grounded.**


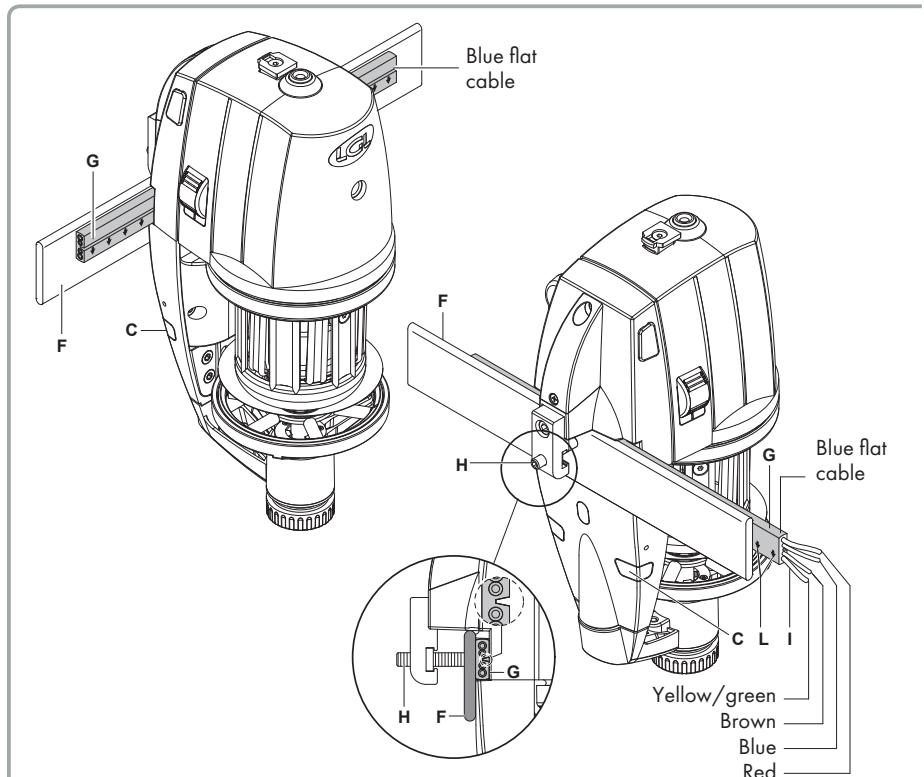


## 2 - INSTALLATION AND START-UP

### HORIZONTAL SET-UP VERSION

For installation of the yarn feeder onto the machine, proceed as follows:


- Fasten the clamp (**F**) with the screw (**G**) to the feeder; then block the clamp on the machine pipe using the grub screw (**H**) that is found in the clamp, placing the feeder with the proper inclination to operate.

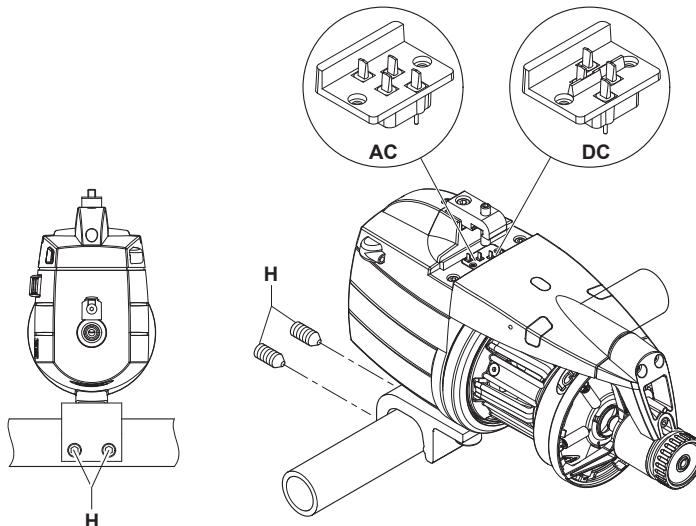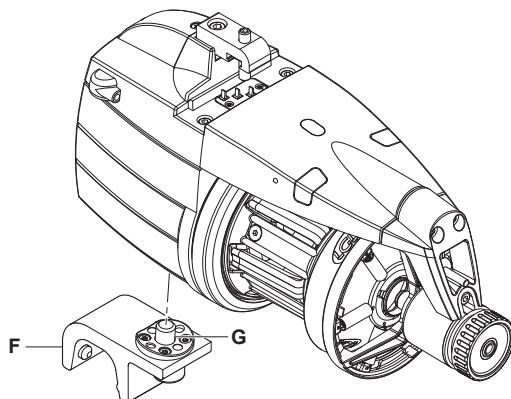


## 2 - INSTALLATION AND START-UP

- Connect up the feeders to the flat power cable (**I**) by means of the appropriate locking plate (**L**) then tighten it in with screw (**M**) located on the housing.



**CAUTION: when connecting the flat power cable, keep to the printed reference marks showing the exact fixing position (the arrows (**N**) must point towards the front end of the feeder).**

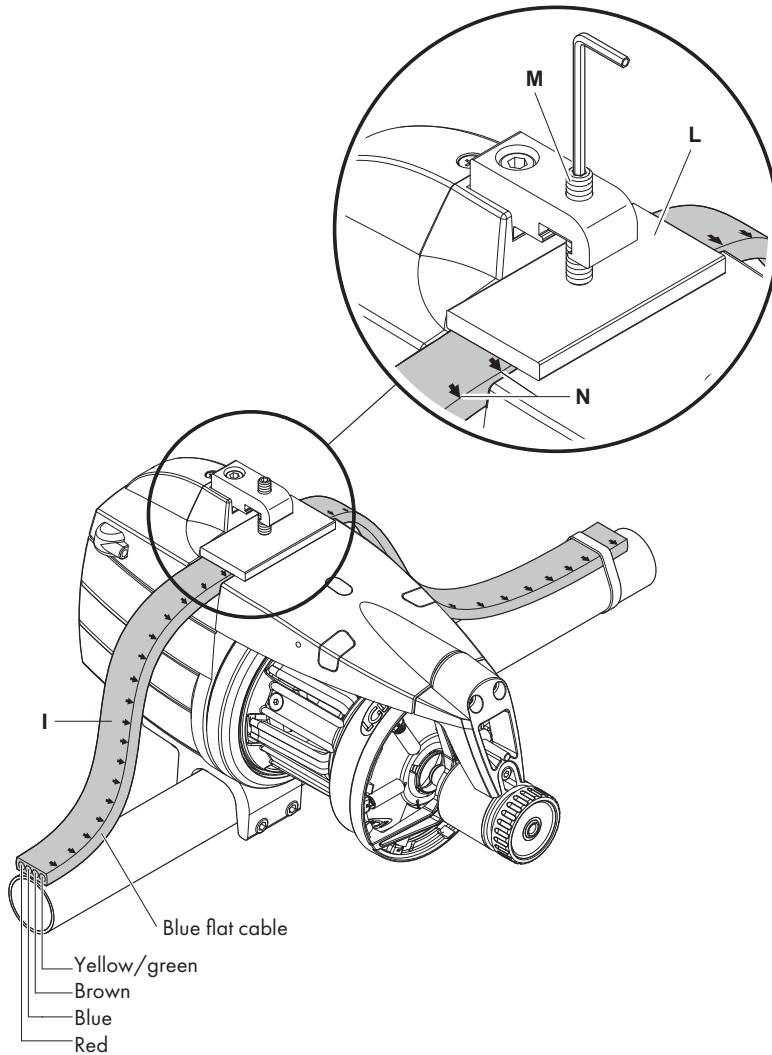

## 2 - INSTALLATION AND START-UP

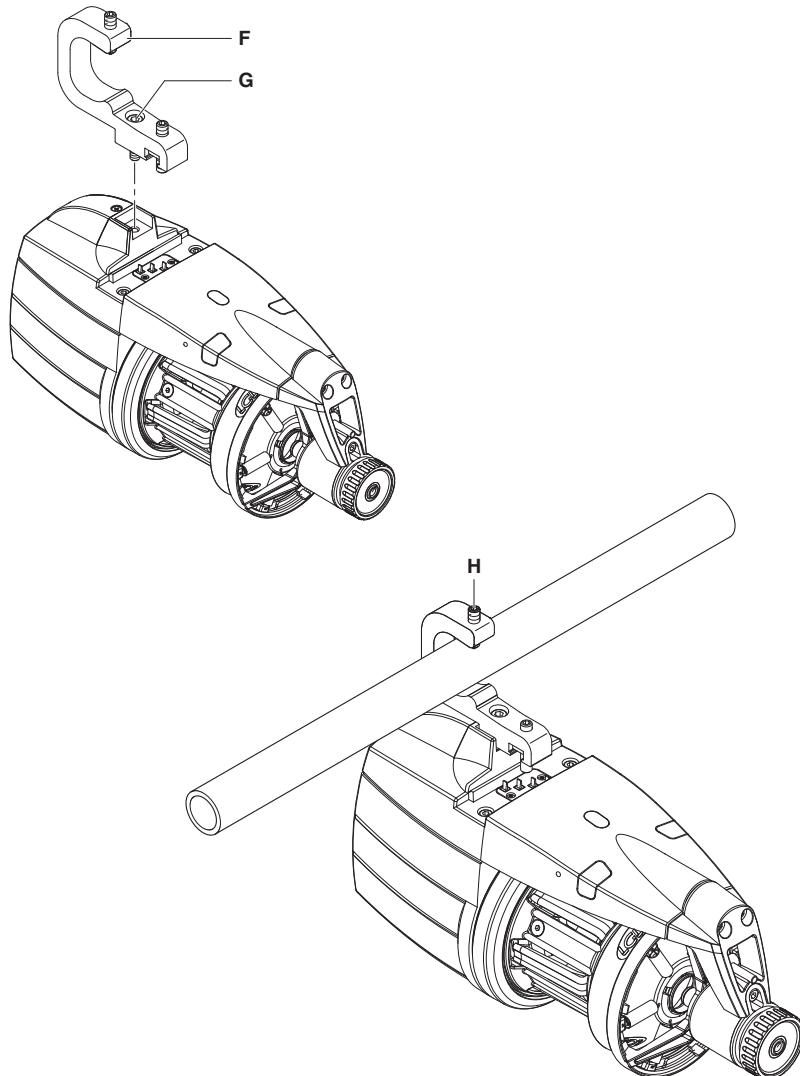


## 2 - INSTALLATION AND START-UP

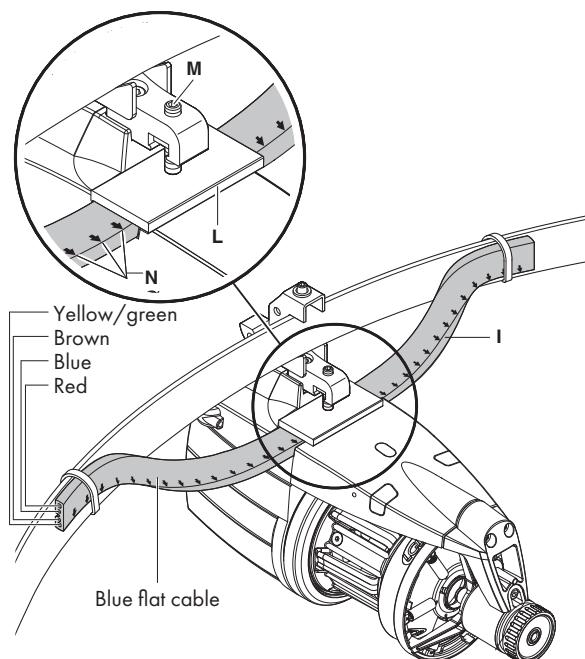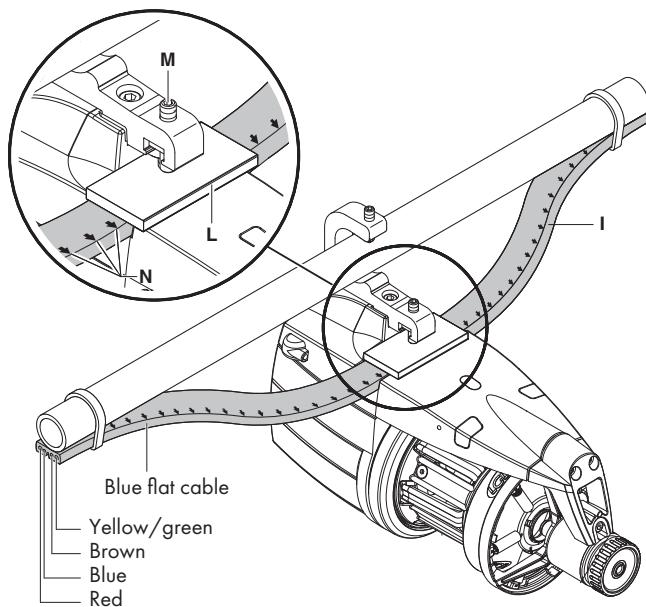


## 2 - INSTALLATION AND START-UP

### 2.2.1 Checklist before power on (DC version)

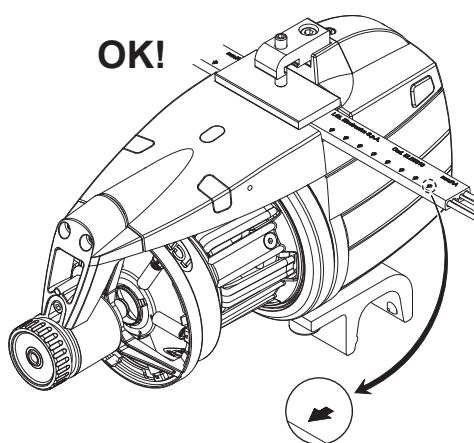


#### SHORT-CIRCUIT TEST

Resistance must be  $> 10\text{ k}\Omega$

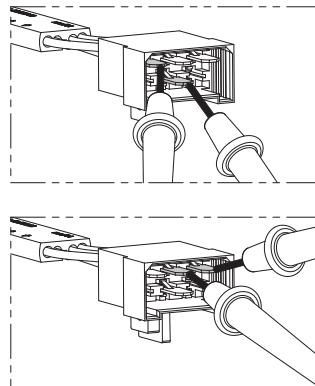


**CHECK CORRECT  
CABLE POSITION**

**CHECK ON THE RING THE GROUND CONNECTION**

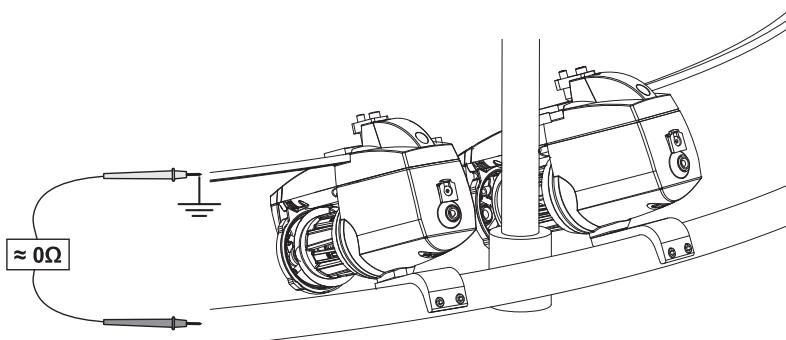


## 2 - INSTALLATION AND START-UP

### 2.2.2 CAN-BUS cables connection

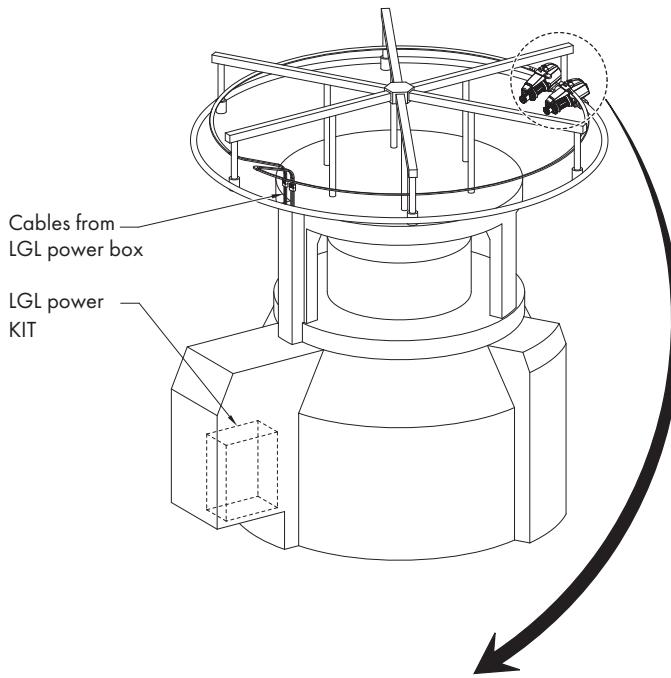

**N.B: CAN BUS Version. If blue flat cable ends like in the following picture:**

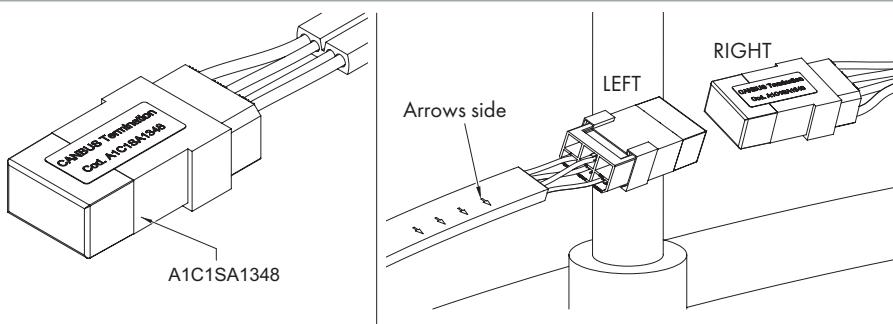

The CAN is terminated with a resistor on the cable, so DS4 must be OFF **on all feeders**.

If one or more DS4 are ON, this will produce a decrease of the BUS resistance, thus leading to communication problems.

## 2 - INSTALLATION AND START-UP


### 2.3 THE ADDRESS KIT

The address kit identifies each feeder on the communication bus, thus allowing a communication with the machine or with a dedicated interface.

This interface allows to get information from feeders or to set parameters (for example set tensions on ATTIVO or read yarn consumption).

On the DC Version (Blue Flat Cable) the address T-connector is installed on the feeder in LGL. The addresses are also marked outside feeder boxes, so that the operator can take the needed numbers.

We suggest to match feeder number with machine feed number.

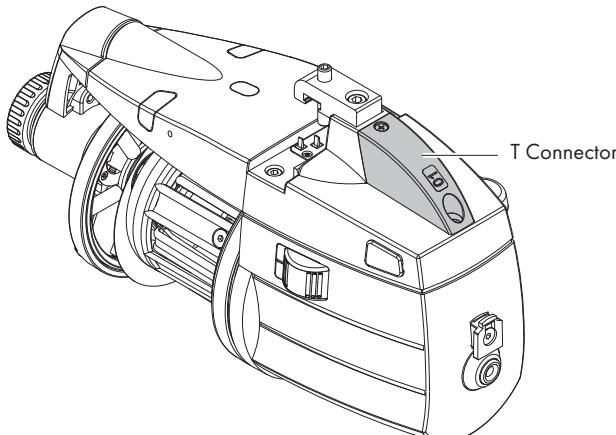


## 2 - INSTALLATION AND START-UP


AC VERSION: Plug the T-connector into the serial communication port and carefully check to see that the number on the connector corresponds with the machine-feed number.

Using its appropriate screw (**36**) fix the connector (**35**) to the outer feeder housing. If not already connected, connect up the relative cables as shown in figure below. Connect the cable leading from the first feeder up to the machine.

The kit comprises a set of numbered T-connectors with the relative connection cables.

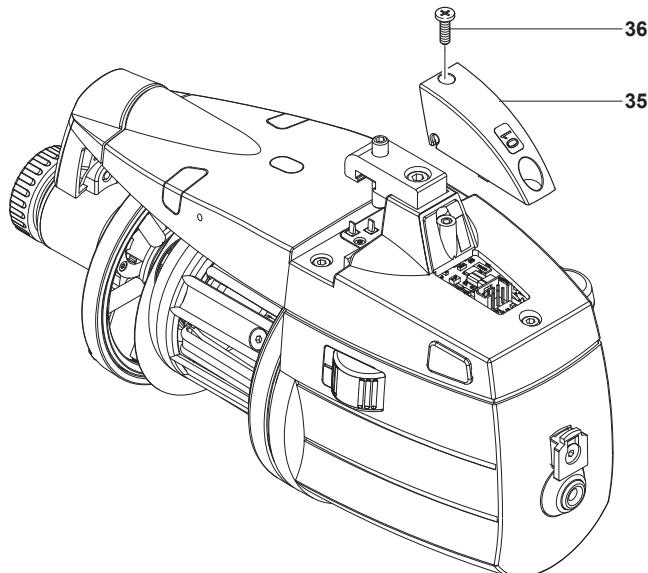

## 2 - INSTALLATION AND START-UP

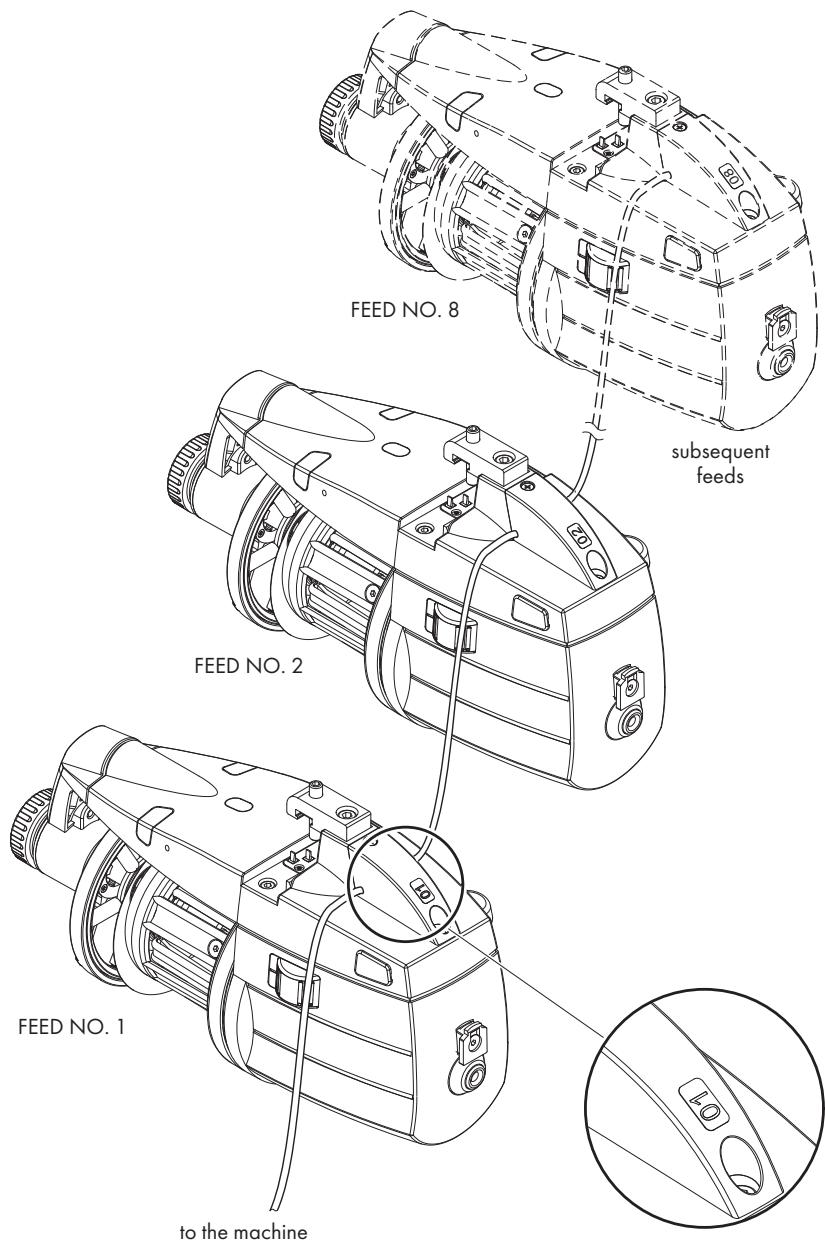

## 2 - INSTALLATION AND START-UP

### 2.4 DIP-SWITCH SETTINGS

Access to the DIP-SWITCH is enabled by snapping off side cap located on the feeder housing.


<b>DS1</b>	<b>SETTING MEANING (Default Position = OFF)</b>
<b>OFF</b>	Z Rotation
<b>ON</b>	S Rotation

<b>DS2</b>	<b>SETTING MEANING (Default Position = OFF)</b>
<b>OFF</b>	Standard optical sensor sensitivity.
<b>ON</b>	Increased optical sensor sensitivity, set when operating with yarn counts thinner than 40 den.

<b>DS3</b>	<b>SETTING MEANING (Default Position = OFF)</b>
<b>OFF</b>	Work position (standard)
<b>ON</b>	<p>Self-calibration of magnetic sensors.</p> <p>The recommended procedure is stated below:</p> <ul style="list-style-type: none"><li>- Set switch 0-1 to 0. Set DS3 to ON.</li><li>- Remove the yarn reserve from the spool body, keeping the feeder threaded.</li><li>- Set switch 0-1 to 1. The feeder winds the reserve laying down a fixed number of turns on the spool body</li><li>- If the procedure has been correctly performed, the feeder will put the indicator lamps on for one second to indicate that calibration has been correctly performed.</li><li>- At the end of the procedure, set switch 0-1 to 0.</li><li>- Set the DS3 to OFF.</li><li>- Set switch 0-1 to 1 to complete the self-calibration.</li></ul>

<b>DS4</b>	<b>SETTING MEANING (Default Position = OFF)</b>
<b>OFF</b>	Bus termination off.
<b>ON</b>	Bus termination on (see paragraph 2.3).

## 2 - INSTALLATION AND START-UP

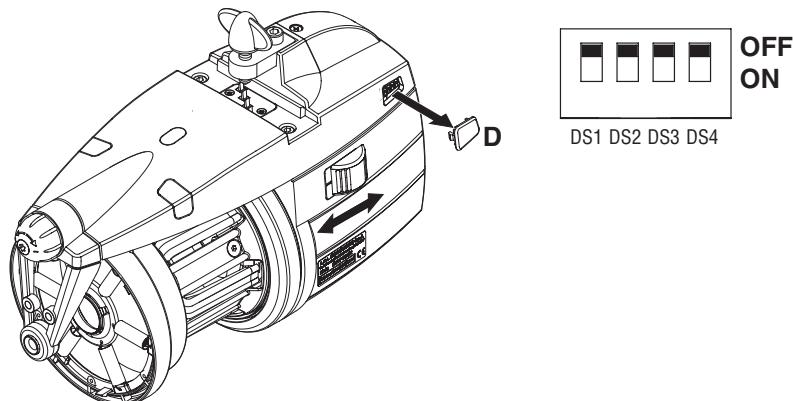



**NOTE: To enable the function performed by each Dip-Switch, the feeder needs to be switched off by acting on switch 0-1; then set the Dip-Switch to the desired position and switch the feeder on again.**

**Alternatively, dip-switches 1, 2 and 3 can be programmed remotely via tablet or PC.**

## 2 - INSTALLATION AND START-UP

### 2.5 AC VERSION TRANSFORMER KIT

#### Up to 10 Feeders

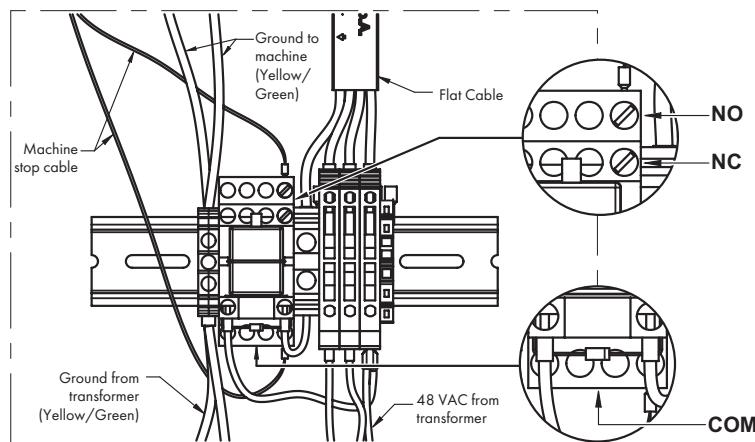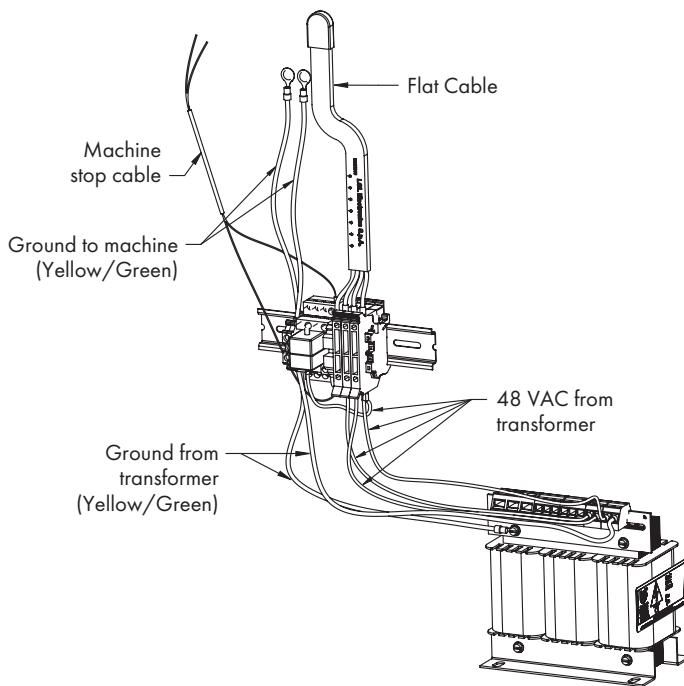

## 2 - INSTALLATION AND START-UP

### 2.6 LARGE DIAMETER KNITTING MACHINES (ONLY DC VERSION)

#### 2.6.1 KLS: automatic output stop motion system

KLS system allows the feeder to stop the machine without using a sensor, in case of an output yarn break event. If the yarn gets broken between the feeder and the machine, the feeder will be able to detect the event and stop the machine.

**NOTE:** if the yarn gets broken before the feeder (between the bobbin and the feeder), this system is not involved. There is another sensor on the feeder itself detecting this case.





KYC



KYC TOUCH

## 2 - INSTALLATION AND START-UP

### 2.6.2 Button for the learning procedure located on the KYC box

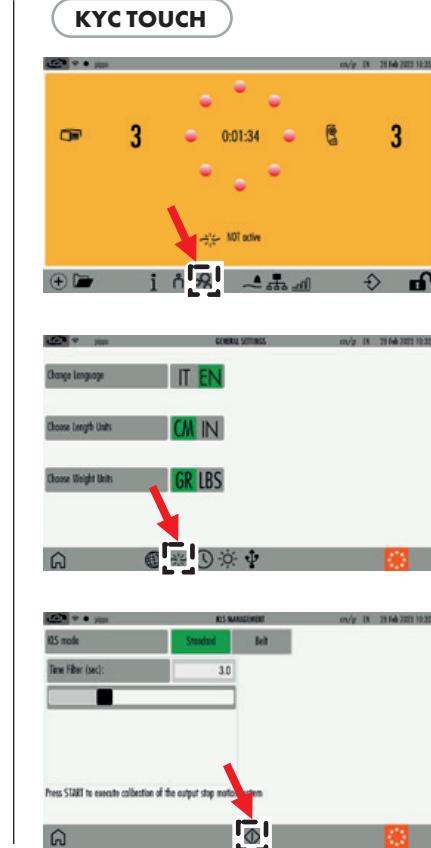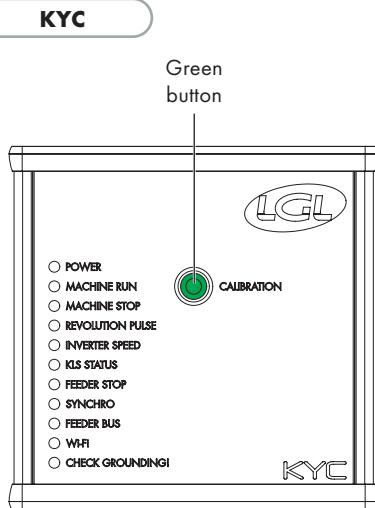

Once the installation is finished and the machine is ready to start, perform the following learning procedure:

1. Press the button for the learning procedure until all feeders lights turn on (approximately 1s). Feeders will keep their lights on while the machine stands.
2. Start up the machine with working speed. All lights turn off.
3. Run the machine until the end of the pattern.
4. At the end of the pattern stop the machine.

When the machine stops, the feeders store the timing in their memory. Now the feeders are ready to check yarn breaks between feeder and machine.

## 2 - INSTALLATION AND START-UP

**NOTE 1:** The machine has to run for at least 8 seconds. If for any reason the machine stops earlier than 8 seconds, re start the machine. If the machine runs for more than 8 seconds, but it stops before the end of the pattern, feeders will be ready to check output yarn breaks. In any case if you get false stops, repeat the procedure being sure that the machine completes one full pattern.

**NOTE 2:** during the procedure, feeders are not able to detect output yarn breaks.

**NOTE 3:** by pressing the button for the learning procedure, all feeders lights turn on. If at this moment the button is pressed a second time, all feeders lights turn off and the system is no more active.

The feeder parameters involved in these functions are:


OYB SW Tmr - Kls Cm delay

See table in chapter 6.1 for further explanations.


## 3 - THREADING AND ADJUSTMENTS

### 3.1 THREADING YARN FEEDER WITH THE TWM TENSION MODULATOR


Yarn feeder threading must be carried out when the device is OFF and as illustrated below:

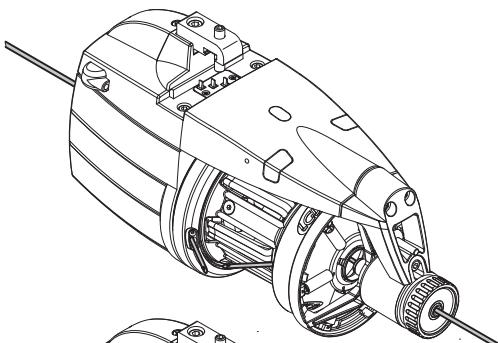


PARTIAL THREADING

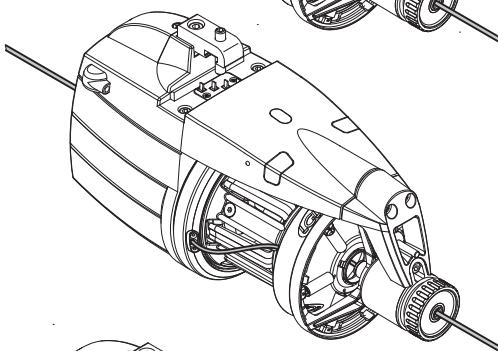

COMPLETE THREADING

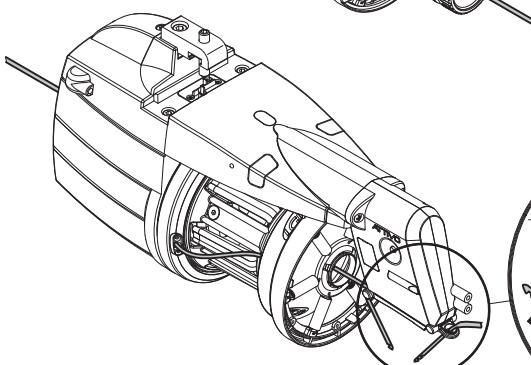

COMPLETE THREADING  
ATTIVO VERSION

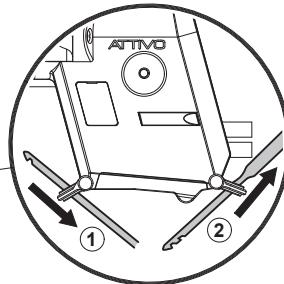

**To avoid damaging the TWM we recommend use of threaders that are in good condition with no yarn accumulation around the threader-ends. Use of iron needles for threading must absolutely be avoided as they are liable to damage the TWM.**

## 3 - THREADING AND ADJUSTMENTS

### 3.2 SPEED ADJUSTMENT

The ECOMINI yarn feeder is provided with a microprocessor and an output sensor that enable **automatic speed adjustment** that conforms to machine feeder speed.

No speed adjustment is therefore required by the operator.


For applications that may require special operational conditions, please consult paragraph 2.4 herein.

### 3.3 TENSIONING ADJUSTMENT

Adjust tensioning until required yarn tension is reached by acting on the outbound tension modulator (TWM) that is fitted onto the feeder.

Use the adjusting twist-knob to do so.

However, tensioning adjustment is completely automatic in yarn feeders that are equipped with the ATTIVO electronic tensioner.

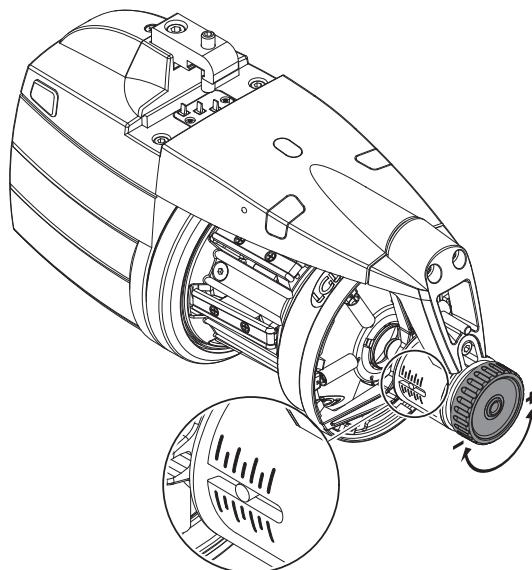


## 4 - MAINTENANCE OPERATIONS

### 4.1 DISMOUNTING THE YARN SPOOL BODY

In order to remove the yarn spool body, follow these steps:




- 1) Power down the yarn feeders by actuating the main switch located on the knitting machine.
- 2) Disconnect the feed strip cable and remove the feeder from the machine.
- 3) Unscrew the 3 set screws **(11)** and remove the guard **(2)**.

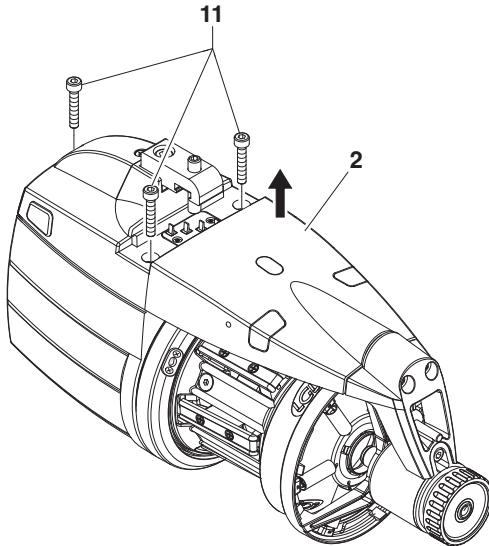

## 4 - MAINTENANCE OPERATIONS


- 4) Unscrew the screw (16); unscrew the 3 fastening screws (13) that are on the thread winding cone (4) and remove the latter.
- 5) Remove the absorber that is fastened to the oscillating hub. The absorber shall be later put back in place taking care to have the notch (19) that is on the external disc to match the hole in the cone (4).

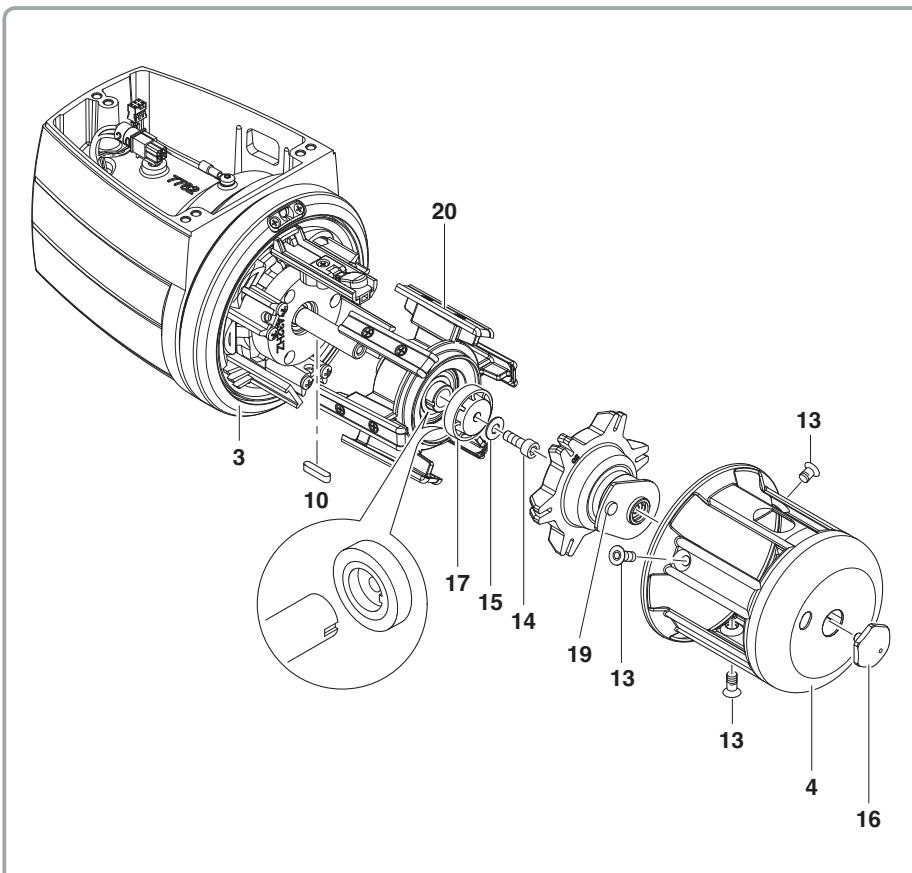


- 6) By holding the flywheel (3) steady (3), unscrew the screw (14) and remove it along with the belleville spring (15); remove the protection (17) from its location on the bush. The latter shall be fit back in place in the same position, i.e. with the protection reference notch into the bush hollow.
- 7) Remove hub (20) by sliding it off the shaft. Remove the tab (10) from the shaft.

## 4 - MAINTENANCE OPERATIONS

8) At this point, if necessary, by unscrewing the set screw (22), it is possible to extract the feeler (23) lock and replace the yarn feeler (25).

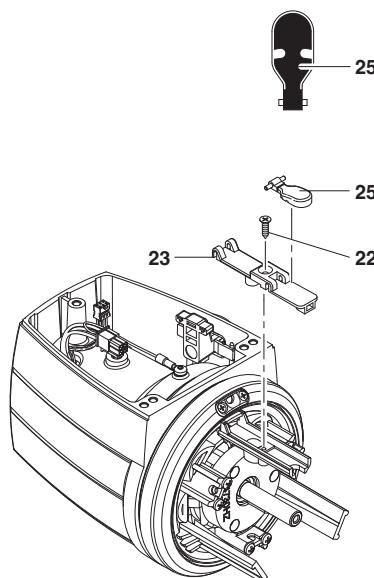


9) Removal of the front magnet holder (28) must be carried out using the appropriate tool (29) that needs to be fixed onto the magnet holder being removed, using the three fixing screws (13) belonging to the yarn spool body. Once removed, detach it from the tool used for extraction.

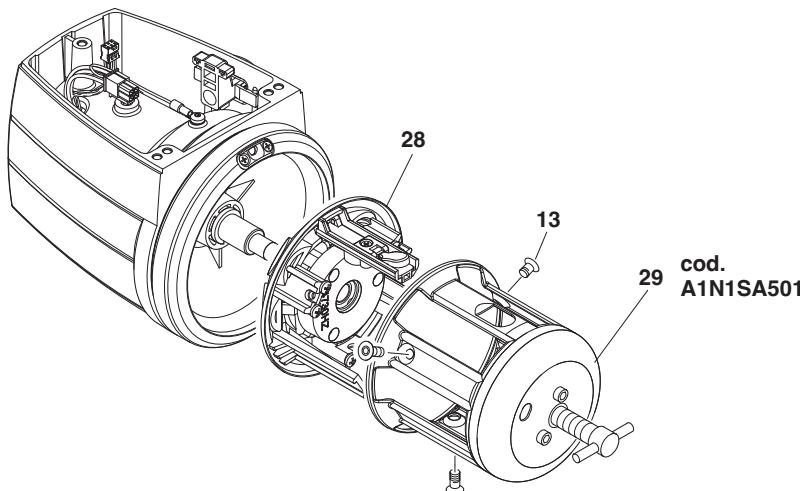

## 4 - MAINTENANCE OPERATIONS

10) At this point the flywheel (30) can be removed. It is now also easy to replace the ceramic bushing (31) located in the yarn feeder shaft.

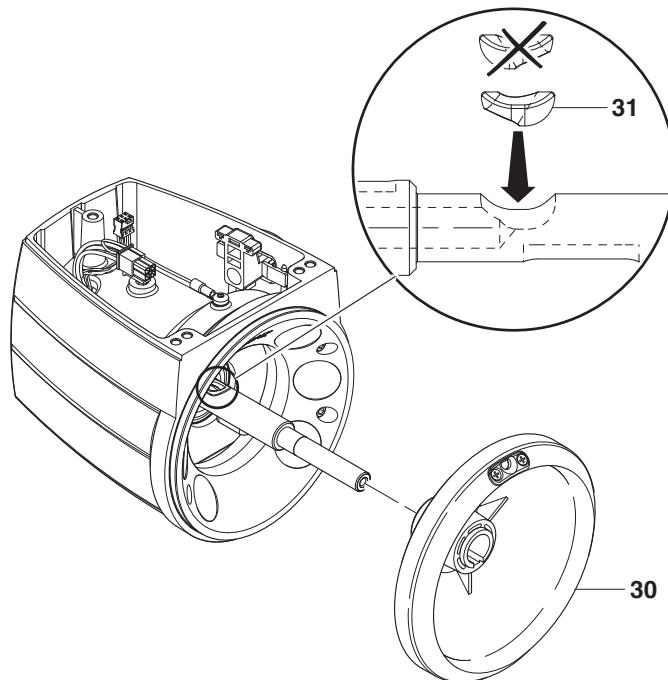

### 4.2 REPLACEMENT OF THE MAIN ELECTRONIC CONTROL BOARD


The main electronic control board can only be replaced by a regularly authorised L.G.L. service and repair centre.

## 5 - COMPONENT REPLACEMENT


### 5.1 REPLACEMENT OF THE TWM TENSIONER

To remove the TWM tension modulator, proceed as follows:

- 1) Release the TWM tension modulator from the support ring by pressing on the retaining lugs.

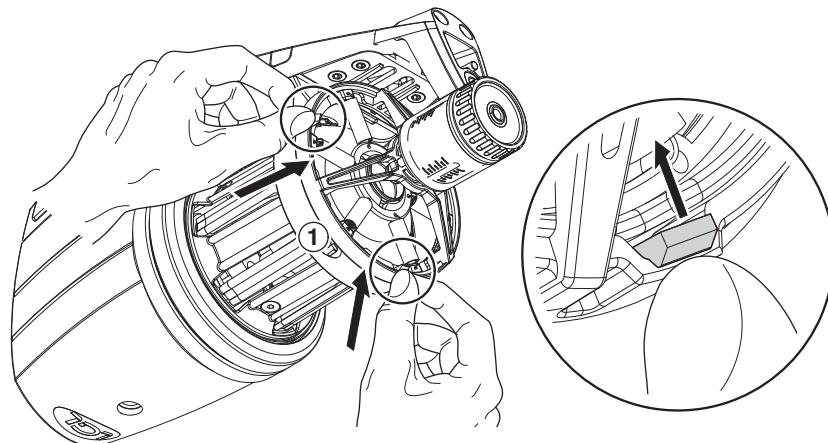


- 2) Pull the knob with one hand and at the same time remove the TWM tension modulator.

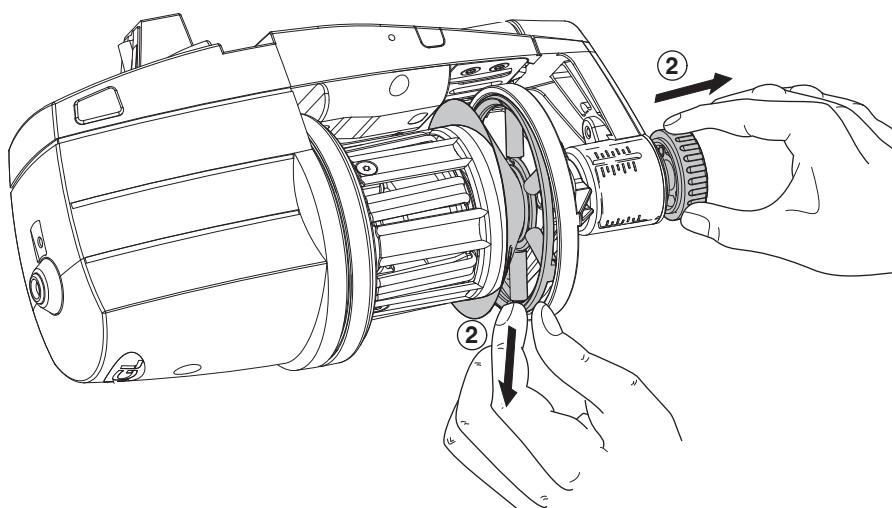

## 5 - COMPONENT REPLACEMENT

3) If the ATTIVO brake is provided, press the release button. The lights will begin to flash fast. The TWM brake opens. It is only possible to act on the TWM unit when the flashing changes from fast to slow

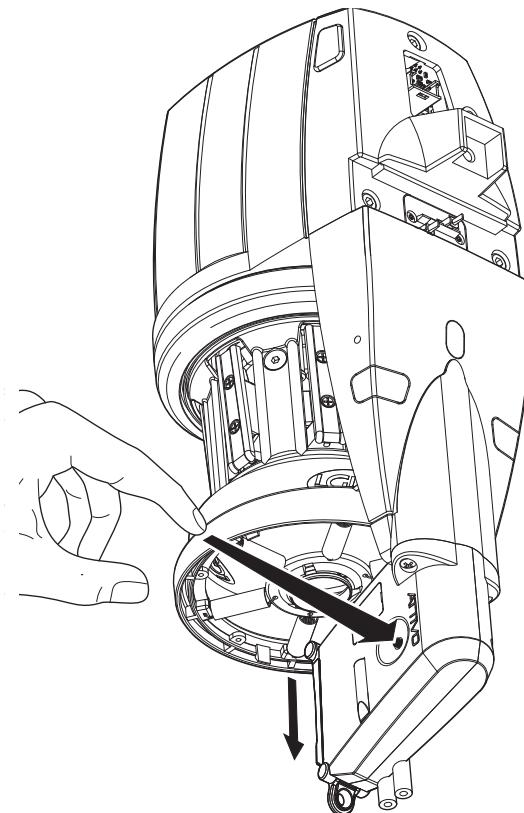


4) Pay attention to the way the springs are fitted to the TWM unit support: the spring hook must be fitted facing outwards from the TWM unit in order to prevent contact with the cone section and thus damage it.



## 5 - COMPONENT REPLACEMENT

5) If the ATTIVO brake is provided, when the new TWM unit has been installed, press the release button. The lights will change from slow flashing to fast flashing. The brake will then return to its previous working position.

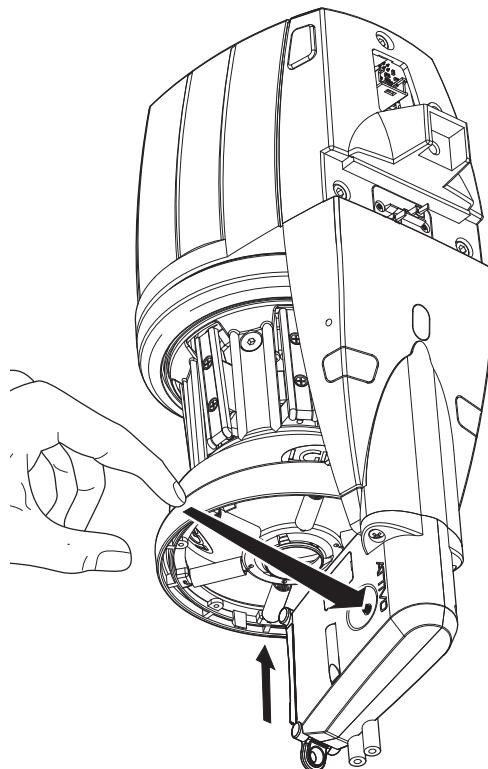


## 5 - COMPONENT REPLACEMENT


### 5.2 REPLACEMENT OF THE BRISTLE BRUSH

The operating procedures for replacing the bristle brush are as follows:

- 1) Release the bristle brush from the support ring by pressing on the retaining lugs.

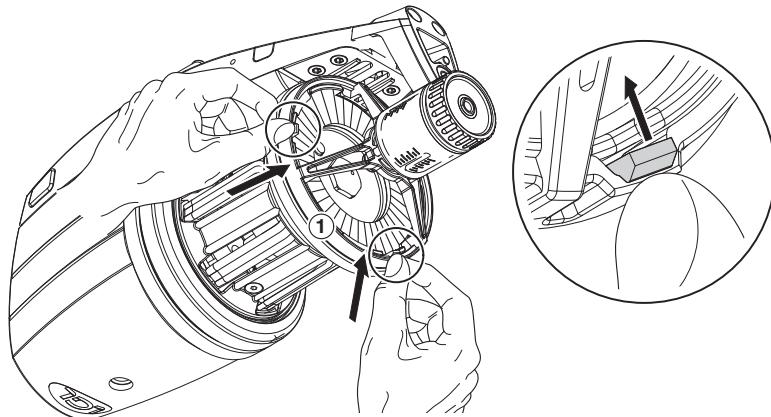


- 2) Pull the knob with one hand and simultaneously remove the bristle brush.

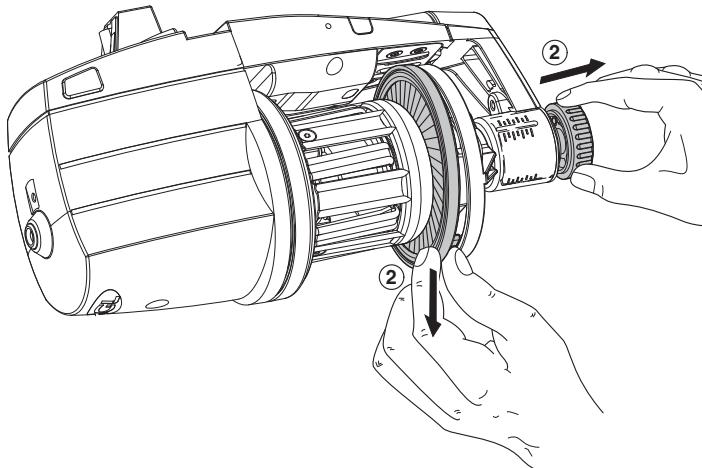


## 5 - COMPONENT REPLACEMENT

3) If the ATTIVO brake is provided, press the release button. The lights will start flashing quickly. The bristle brush unit will open. You are allowed to operate the bristle brush unit when the latter shifts from fast blinking to slow flashing.

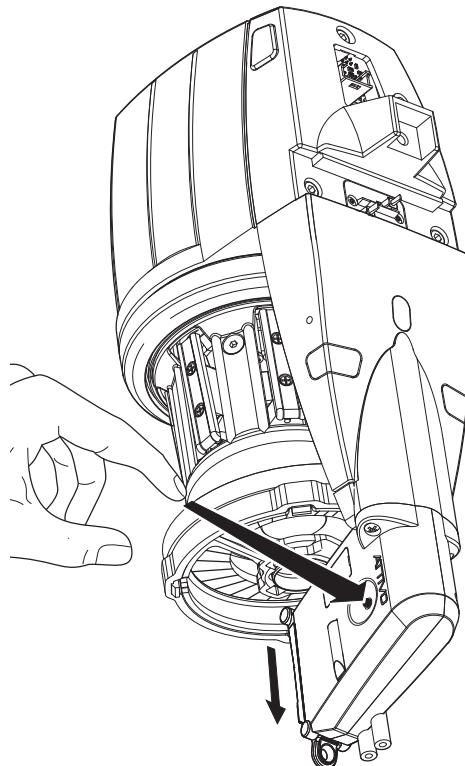


## 5 - COMPONENT REPLACEMENT

4) Pull the brush to be replaced out of the holder. Insert the new brush by pressing it into its support. Ensure that the ends of the bristles are joined when they are fitted into the ring.

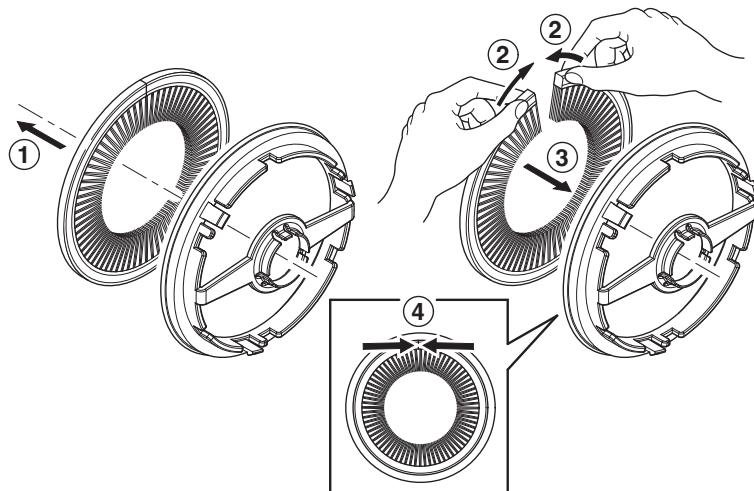

5) If the ATTIVO brake is provided, once the new bristle brush unit has been fitted, press the release button. The indicator lights will change their flashing frequency from slow to fast. Then the bristle brush unit will resume its previous working position.

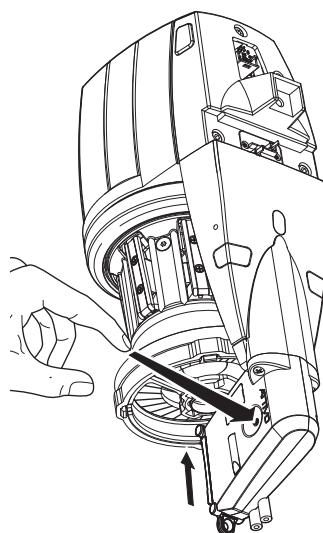

## 6.1 ATTIVO ELECTRONIC TENSIONER


**ATTIVO** is an electronic system that has been purposely conceived to hold yarn tension constant and programmable. The output sensor provides a real-time measurement of the output tension and an electric motor uses this value to adjust the position of the TWM tensioner. Thus, all tension-related issues, e.g. yarns that change in features on the same bobbin, differences in yarn waxing, differences in yarn tension in full and empty bobbins and so on, can be solved.

The desired tension can be set via a PC or tablet.

The involved parameters are:

- T des. dgr: to set the desired tension;
- T read dgr: to read the current tension (in order to understand whether the tension sensor is operating in a proper manner).

**NOTE: if the desired tension cannot be obtained during normal operation, the front indicator lights will start blinking.**

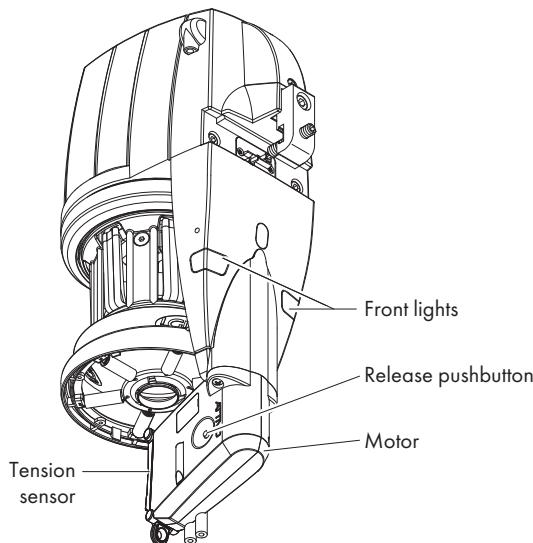

## 6 - ATTIVO

In addition to the two tension parameters, there are other parameters that may be relevant:

Parameter	Default setting	Description	Notes
KLSCm Delay	86	To speed up the feeder's response time, in case of output yarn breakage (faster KLS response time)	To be set from 20 to 100. If it is too low, false stops are potential problems. If the value is decreased, the KLS response time also decreases, if the value is increased, the KLS response time increases.
ENBrk OpAlr	0	If =1, if the ATTIVO brake is open, the feeder stops the machine	
EnOffstp	0	If =1, if the ON/OFF switch is in the OFF position, the feeder stops the machine	If ENOff STP is =1, the Offset is as follows: 1. Thread the yarn into the feeder. 2. Remove the yarn from the load cell. 3. Switch off the feeder. The feeder and the brake lights will go on. 4. Press the OFFSET button and hold it pressed until the ATTIVO light goes out. 5. Switch on the feeder. The feeder lights will go out and the ATTIVO indicator light will flash once. This means the offset has been successfully carried out.

## 6 - ATTIVO

Parameter	Default setting	Description	Notes
SM Man pos	150	<p>Useful in the event of breakage of the tension cell, for manual adjustment of yarn voltage.</p> <p>Use: Set TDes=0 Press the ATTIVO opening button. When the Attivo unit is fully open, press the button once again to close it. The brake closes 150 motor steps.</p>	
Tens TmOut	40 (secondi)	If the set tension is not reached within Tens TmOut, the feeders will stop the machine (Tmterr)	
OYB SW Tmr	0 (KLS disabilitato)	<p>Time interval between two subsequent windings. (ms=OYB SWTmr*50).</p> <p>Trigger value for KLS.</p>	Check for the correct value: if the machine increases speed the value must decrease. If the machine decreases speed, the value must increase.
AutSync Tim	0	<p>If it is =0, yarn consumption is in cm/rev</p> <p>If it is ≠0, yarn consumption is in cm/AutSyncTim seconds (up to 15)</p>	<p>AutSyncTim=0 for seamless and large diameter (where the rev signal is provided).</p> <p>AutSyncTim=1 for tights.</p>

## 6 - ATTIVO


Parameter	Default setting	Description	Notes
Real speed		Feeder speed in revs per minute	Max 4900 revs. per min Yarn consumption in m/min = actual speed x 16.3
Rot s/z Src	1	1 = direction of rotation set by dip switch DS1 0 = direction of rotation read by parameter Rot s/z	
Rot s/z	0	0 = Z rotation 1 = S rotation	Only significant if Rot s/z Src
Sens FTC Src	1	1 = Photocell sensitivity set by dip switch2 0 = photocell sensitivity read by parameter "Sens FTC"	
Sens Ftc	1	1 = standard 0 = fine yarns < 40den	Only significant if Sens Ftc Src = 0
T Des Dgr	40 (grams)	Set tension	
T Read Dgr		Read tension	

## 6.2 OFFSET

Upon first installation of this device, you need to enable the tension sensor to acquire the OFFSET function (mechanical error zero function).

Follow the procedure below:

- Remove the yarn from the tension feeder.
- Switch off the feeder.
- Press the release button and hold it pressed until the device light turns on.
- Switch on the feeder.
- Light will turn off and OFFSET is obtained.

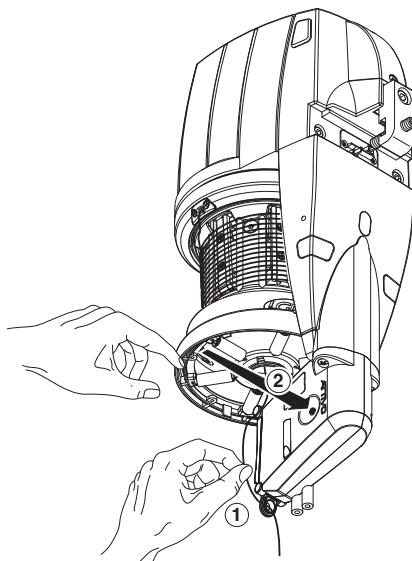

**NOTE 1:** The OFFSET procedure may have to be repeated even after the equipment has been inoperative for some time.

**NOTE 2:** The OFFSET procedure must be performed each time a feeder that was in stock or a feeder back from a repair is installed on the machine.


**NOTE 3:** Below OFFSET procedure in case "ENOFFSTP" parameter is 1.

- Remove the yarn from the tension feeder.
- Switch off the feeder. The device light turns on.
- Press the release button and hold it pressed until the device light turns off.
- Switch on the feeder.
- Light will turn on and OFFSET is obtained.

## 6 - ATTIVO


### FEEDERS ALARMS

By clicking on the STATUS button located on each feeder it is possible to ask feeders about their status. If a feeder has its lights ON or blinking, it means the feeder is in alarm condition. At the same time the feeder is sending an information about the alarm. By clicking on the STATUS button it is possible to display the alarm reason.

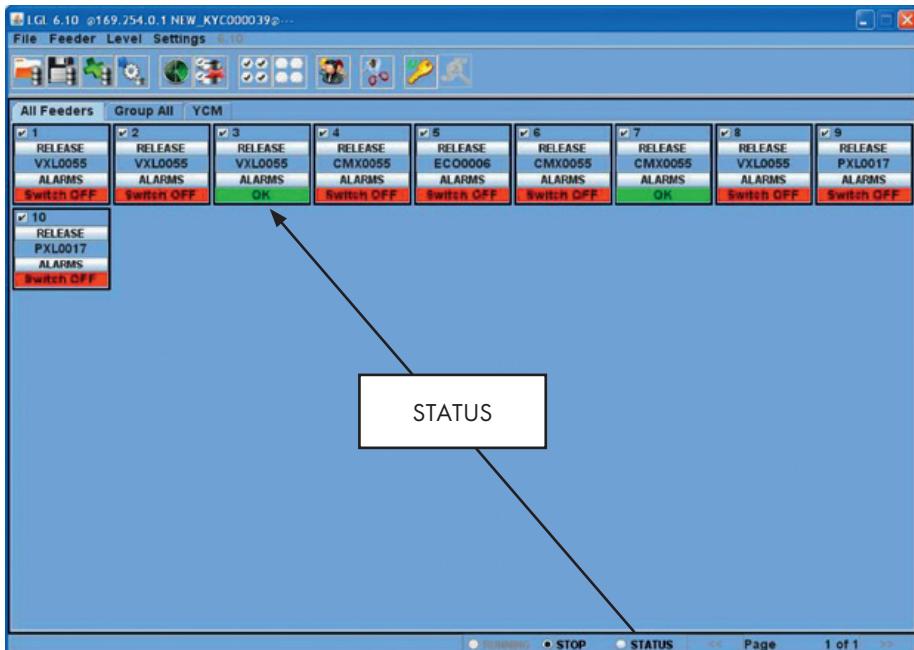


In this example feeder number 3 is OK.

STATUS TAB located at the bottom of the screen: alarm monitoring in continuous mode. This feature is necessary if the computer is far from the machine, in order to be able to have information on possible alarms without being at the machine. In case an alarm takes place while the machine is running and the STATUS tab is selected, the feeder will stop the machine and a big writing will come out on the display as in the following picture:

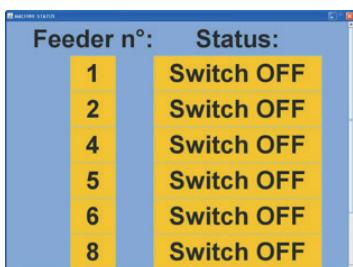


## 6 - ATTIVO

Feeders alarms on KYC touch

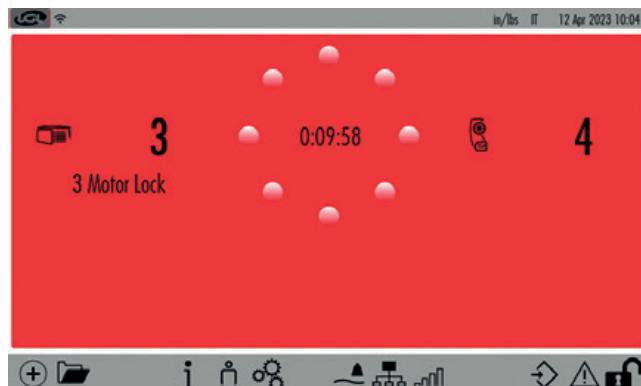

If one feeder goes in alarm, the screen changes as follow:

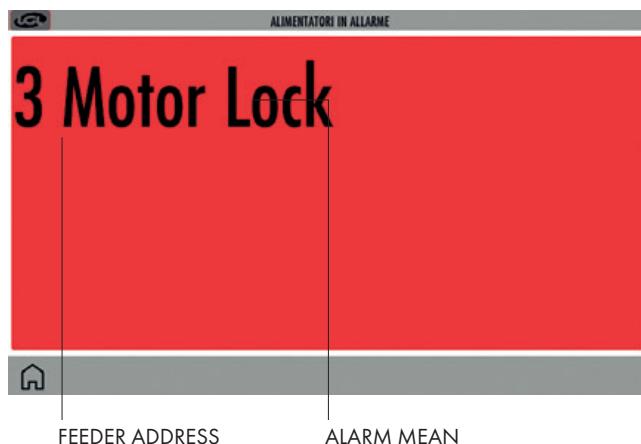

## 6 - ATTIVO

In case feeders are OK, nothing will be shown on the display. Here below a list of the possible alarms:

ALARM	MEANING	ACTIONS
AC PWRFAIL	phase number 2 (blue) and /or phase number 3 (yellow) are missing	Check input voltage and feeder connection on the flat cable
YARN BREAK	Yarn broken before the feeder	Repair the yarn
MOTOR LOCK	Yarn entangled somewhere between the bobbin and the feeder	Check yarn passage between bobbin and feeder
HIGH TEMPERATURE	Too high temperature on the feeder electronic	<ol style="list-style-type: none"> <li>1. Reduce input tension on the yarn</li> <li>2. Check that the flywheel turn freely. In case disassemble spool body and remove dust and/or yarn residual.</li> </ol>
TIME ERROR	the feeder takes too much time to wind up the yarn on the spool body at the start up.	Stop the yarn on the spool body with one finger to help yarn reserve filling procedure.
VB MOT FAIL	DC voltage on the motor too low.	Check connections on the power transformer primary voltage winding.
AC1PWRFAIL	phase number 1 (black) is missing.	Check input voltage and feeder connection on the flat cable
SWITCH OFF	ON OFF switch in position OFF	Switch ON the feeder (see also EN OFF STP parameter)
TENSMTRERR	The feeder can't reach the preset tension value within a preset time (see also TensTMOOut parameter page 58).	<p>Check the following:</p> <ol style="list-style-type: none"> <li>1. The yarn is passing on the load cell,</li> <li>2. The TWM brake and springs are suitable to reach the desired tension</li> <li>3. OFFSET of the load cell</li> </ol>
OYB ERROR	yarn broken after the feeder (or yarn consumption too low)	Repair the yarn


## 6 - ATTIVO

ALARM	MEANING	ACTIONS
ELBRK OPEN	brake open (ATTIVO).	Close it by pressing the related button located on the ATTIVO blck support
PREWINDERR	Only during winding up phase of the spool body, during the start up or after a yarn break	It tells that during spool body filling up, the machine cannot run.
I2T ERROR	I2T protection	3. Reduce input tension on the yarn 4. Check that the flywheel turn freely. In case disassemble spool body and remove dust and/or yarn residual


## 7 - APPLICATION RANGE

### 7.1 TWM TENSION MODULATOR APPLICATION RANGES

TYPE OF YARN	SPRINGS	YARN RANGE
Woollen yarns	0.4	From 100 Nm to 15 Nm
Cotton and viscose fibre yarns	0.4	From 120 Ne to 10 Ne
High-twist, crêpe and silk yarns	0.3	From 20 Den to 120 Den
High-twist, crêpe and silk yarns	0.4	From 100 Den to 250 Den
Viscose and synthetic fibre yarns	0.3	From 10 Den to 120 Den
Viscose and synthetic fibre yarns	0.4	From 100 Den to 250 Den

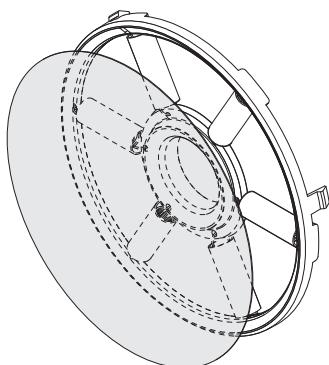

**TWM TYPE K**

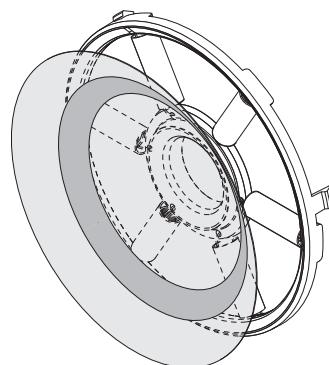


**TWM TYPE KL**

- For tensioning strength exceeding 10 grams, use of **TWM KL** is recommended.

## 7 - APPLICATION RANGE

It is possible to replace the truncated cone, the disk unit, the o-ring and chrome ring of the TWM.

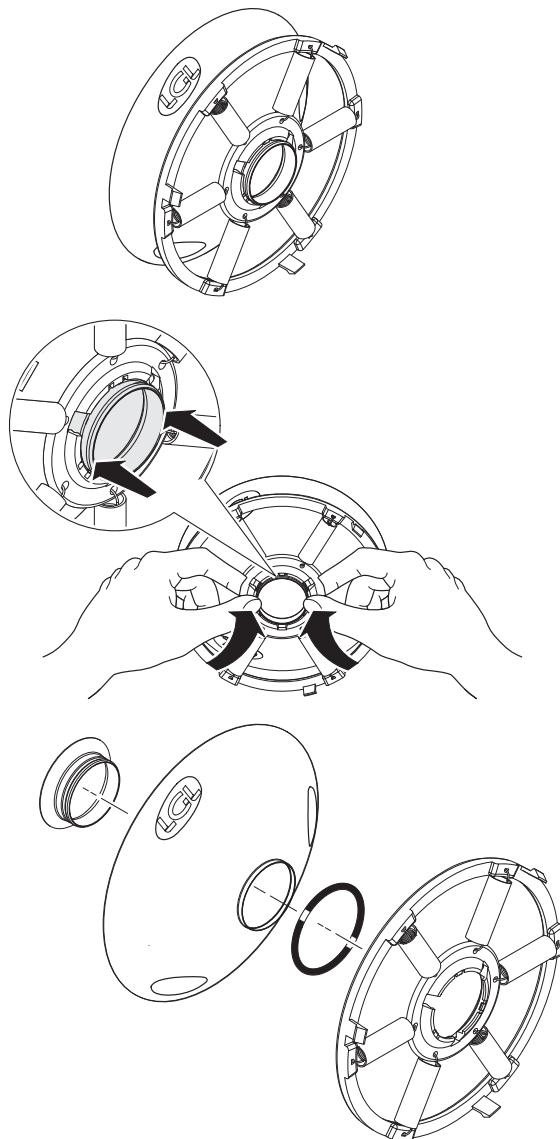

## 8 - APPLICATION RANGE

### 8.1 CONVERSION TABLE FOR THE VARIOUS YARN COUNT SYSTEMS

Nm	Ne	tex	den	Dtex	Ne <sub>L</sub>	Nm	Ne	tex	den	Dtex	Ne <sub>L</sub>
<b>18.000</b>	10,63	56	<b>500</b>	550	29,76	<b>48.000</b>	28,35	<b>21</b>	187	208	79,37
18.140	10,71	56	496	551	<b>30</b>	48.380	28,57	<b>21</b>	186	206	<b>80</b>
19.350	11,43	52	465	516	<b>32</b>	<b>50.000</b>	29,53	<b>20</b>	<b>180</b>	200	82,68
<b>20.000</b>	11,81	<b>50</b>	<b>450</b>	<b>500</b>	33,07	50.800	<b>30</b>	<b>20</b>	177	197	84
20.320	<b>12</b>	<b>50</b>	443	492	33,60	54.190	<b>32</b>	<b>18</b>	166	184	89,6
21.170	12,50	48	425	472	<b>35</b>	54.430	32,14	<b>18</b>	165	183	<b>90</b>
22.500	13,29	44	<b>400</b>	440	37,20	<b>60.000</b>	35,43	17	<b>150</b>	<b>167</b>	99,21
23.710	<b>14</b>	<b>42</b>	380	420	39,20	60.480	35,71	17	149	166	<b>100</b>
24.190	14,29	42	372	413	<b>40</b>	60.960	36	<b>16</b>	147	165	100,8
25.710	15,19	38	<b>350</b>	390	42,52	64.350	38	<b>16</b>	140	156	106,4
27.090	<b>16</b>	<b>36</b>	332	369	44,80	67.730	40	<b>15</b>	132	147	112
27.210	16,07	<b>36</b>	331	367	<b>45</b>	<b>70.000</b>	41,34	14	129	143	115,7
<b>30.000</b>	17,72	34	<b>300</b>	<b>335</b>	49,61	74.510	44	<b>13</b>	121	134	123,2
30.240	17,86	34	297	330	<b>50</b>	75.000	44,29	<b>13</b>	<b>120</b>	<b>133</b>	124
30.480	<b>18</b>	<b>32</b>	295	328	50,40	<b>80.000</b>	47,24	<b>12,5</b>	112	125	132,3
<b>32.000</b>	18,90	<b>32</b>	280	310	52,91	81.280	48	<b>12,5</b>	110	122	134,4
33.260	19,64	<b>30</b>	270	300	<b>55</b>	84.670	50	<b>12</b>	106	118	<b>140</b>
33.870	<b>20</b>	<b>30</b>	266	295	56	<b>90.000</b>	53,15	11	<b>100</b>	<b>110</b>	148,8
<b>34.000</b>	20,08	<b>30</b>	265	294	56,22	101.600	60	<b>10</b>	88	97	168
<b>36.000</b>	21,26	28	<b>250</b>	<b>280</b>	59,53	118.500	70	<b>8,4</b>	76	<b>84</b>	196
36.290	21,43	28	248	275	<b>60</b>	<b>120.000</b>	70,86	<b>8,4</b>	<b>75</b>	<b>84</b>	198,4
39.310	23,21	<b>25</b>	229	254	<b>65</b>	135.500	80	<b>7,2</b>	66	73	224
<b>40.000</b>	23,62	<b>25</b>	225	250	66,14	<b>150.000</b>	88,58	6,8	<b>60</b>	<b>67</b>	248
40.640	<b>24</b>	<b>25</b>	221	246	67,20	152.400	<b>90</b>	<b>6,4</b>	59	64	252
42.330	25	24	212	235	<b>70</b>	169.300	<b>100</b>	<b>6</b>	53	58	<b>280</b>
44.030	<b>26</b>	<b>23</b>	204	227	72,80	186.300	<b>110</b>	<b>5,2</b>	<b>48</b>	53	-
<b>45.000</b>	26,57	22	<b>200</b>	<b>220</b>	74,41	203.200	<b>120</b>	<b>5</b>	<b>44</b>	49	-
47.410	<b>28</b>	<b>21</b>	189	210	78,40						

## 9 - TROUBLE SHOOTING

### 9.1 DURING INSTALLATION

- If the yarn feeder will not work once it has been fitted onto the machine, (i.e. the orange lights won't light up and the motor won't run), check to see that the flat strip power cable has been connected correctly (par. 2.1, 2.2 refers). Try loosening and reconnecting the feeder back onto the power cable once again. If it doesn't start up, try moving the fixing point on the power cable 1 cm away to the side.

If, after having tried the above options the feeder still doesn't start up, it must be replaced due to a probable failure of the main control board.

### 9.2 DURING OPERATION

- If after having functioned correctly, the feeder's orange signal lights won't light up when the machine stops, check to see whether the lights are still working correctly.
- If any failure by the feeder were not caused by incorrect installation or by connection errors, there probably is a failure in the main control board.

In these cases the yarn feeder must be replaced and the repair operations must be carried out by regularly authorised L.G.L. personnel.

## 10 - APPLICATION RANGE

If stripping and scrapping of the machine is required, relative rating plates and all related documents must be destroyed or cancelled. If the machine is to be scrapped by third parties, only authorised centres are to be used for any waste recovery or disposal of the ensuing materials.

If the machine is to be scrapped directly by the user, it is important that the materials are split according to their category and then disposed of separately through specialised centres.

All metal parts, the electrical motor, rubber parts and all the parts made out of synthetic materials must be separated for recycling. Scrapping must at all times be carried out in full conformity with prevailing laws in the country of use wherefore any liability for non compliance with any local requirement lies solely with the last proprietor of the machine and/or any appointed nominee.

**L.G.L. Electronics** will not be held liable for any damage or injury whatsoever arising from reuse of any one of the machine components for operations or assemblies that do not in any way conform to the original use the machine was intended for.

# L.G.L. ELECTRONICS S.p.a.

*Sede amministrativa, legale e stabilimento  
Via Foscolo 156, - 24024 Gandino (BG) - Italy  
Tel. (Int. + 39) 35 733408 Fax (Int. + 39) 35 733146*

---

— ITALIANO —

## **DICHIARAZIONE DI CONFORMITÁ CE**

La macchina è un alimentatore di trama per macchine per maglieria.

Produttore: **L.G.L. Electronics**  
Modello: **ECOMINI**



La macchina è conforme ai requisiti essenziali delle direttive 2006/42/CE, 2014/35/UE, 2014/30/UE.

— ENGLISH —

## **CE CONFORMITY DECLARATION**

This machine is a weft accumulator, suitable for knitting machines.

Manufacturer: **L.G.L. Electronics**  
Model: **ECOMINI**



The machine is in compliance with the main requirements of directives 2006/42/CE, 2014/35/UE, 2014/30/UE.

— FRANÇAISE —

## **DECLARATION DE CONFORMITE CE**

L'appareil est un délivreur de trame pour métiers à tricoter.

Producteur: **L.G.L. Electronics**  
Modèle: **ECOMINI**



La machine est conforme aux conditions requises essentielles des directives 2006/42/CE, 2014/35/UE, 2014/30/UE.

— DEUTSCH —

## CE ÜBEREINSTIMMUNGS ANGABE

Die Maschine ist ein Vorspulgerät für Wirkmaschinen.

Hersteller: **L.G.L. Electronics**  
Typ: **ECOMINI**



Die Maschine entspricht der wesentlichen Anforderungen der Richtlinien 2006/42/CE, 2014/35/UE, 2014/30/UE.

— ESPAÑOL —

## DECLARACIÓN DE CONFORMIDAD CE

La máquina es un alimentador de trama para máquinas de género de punto por urdimbre.

Productor: **L.G.L. Electronics**  
Modelo: **ECOMINI**



La máquina está en conformidad con los requisitos esenciales de las directivas 2006/42/CE, 2014/35/UE y 2014/30/UE.

— PORTUGUES —

## DECLARAÇÃO DE CONFORMIDADE CE

A máquina é um alimentador de trama para máquinas de malha por urdimento.

Productor: **L.G.L. Electronics**  
Modelo: **ECOMINI**



A máquina está em conformidade com os requisitos essenciais das directivas 2006/42/CE, 2014/35/UE, 2014/30/UE.

— NEDERLANDS —

## VERKLARING VAN CE OVEREENSTEMMING

Deze machine is een inslagvoorspoelmachine voor breimachines.

Merk: **L.G.L. Electronics**

Type: **ECOMINI**



De machine voldoet aan de essentiële vereisten van de richtlijnen 2006/42/CE, 2014/35/UE, 2014/30/UE.

— ΕΛΛΗΝΙΚΑ —

## ΔΗΛΩΣΗ ΣΥΜΜΟΡΦΩΣΗΣ CE

Το μηχάνημα είναι ένας τροφοδότης υφαδιού που δουλεύει με μηχανικούς αργαλειούς με λαβίδες ή σαίτες.

Ιδιοκτήτης: **L.G.L. Electronics**

Τύπος: **ECOMINI**



Η μηχανή πληρεί τις βασικές προϋποθέσεις που ορίζονται από τις οδηγίες 2006/42/CE, 2014/35/UE, 2014/30/UE.

— SVENSKA —

## CE OVERENSSTÄMMELSEDEKLARATION

Maskinen är en stickmaskin.

Märke: **L.G.L. Electronics**

Typ: **ECOMINI**



Maskinen överensstämmer med de grundläggande kraven enligt EU-direktiven 2006/42/CE, 2014/35/UE och 2014/30/UE.

— SUOMEKSI —

## CE VASTAAVUUSTODISTUS

Kone on neulekone.

Merkki: **L.G.L. Electronics**

Typpi: **ECOMINI**



Kone on direktiivien 2006/42/CE, 2014/35/CE ja 2014/30/UE olennaisen vaatimusten mukainen.

— DANSK —

## CE OVERENSSTEMMELSERKLÄRING

Maskinen er en strikkemaskine.

Mærke: **L.G.L. Electronics**

Type: **ECOMINI**



Maskinen opfylder de grundlæggende krav i EU-direktiverne 2006/42/CE, 2014/35/UE og 2014/30/UE.

*Gandino, 04/11/2024*

**Authorized to compile the technical file**

*Il Direttore Generale: Ing. Zenoni Pietro*

A handwritten signature in black ink, appearing to read 'Pietro Zenoni'.







**L.G.L. Electronics (Hangzhou) CO.Ltd.**

Building 17, 189 Hongcan Road,  
Hongken Nongchang, Economic Development Zone,  
Xiaoshan District, Hangzhou, Zhejiang  
T: +86-571-82877258  
F: +86-571-82877268  
Email: [lglhz@lgl.it](mailto:lglhz@lgl.it)

**爱吉尔电子(杭州)有限公司**

浙江省杭州市萧山区经济技术开发区红垦农场红  
灿路189号17幢  
电话: +86 0571-82877258  
传真: +86 0571-82877268  
邮箱: [lglhz@lgl.it](mailto:lglhz@lgl.it)

**L.G.L. Electronics (Hangzhou) Co., Ltd. FOSHAN Branch**

52-54 Jin Hong Street, Textile City, Xiqiao Town,  
Nanhai District, Foshan, Guangdong  
T: +86-757-86819435  
F: +86-757-86898258  
Email: [yli@lgl.it](mailto:yli@lgl.it)

**爱吉尔电子(杭州)有限公司佛山分公司**

广东省佛山市南海区西樵轻纺城锦虹街52-54号  
电话: +86-757-86819435  
传真: +86-757-86898258  
邮箱: [yli@lgl.it](mailto:yli@lgl.it)

**L.G.L. Electronics (Hangzhou) Co.,Ltd. -  
SHANTOU service station**

A2108, Building 15, Dongsheng New World,  
Gurao Town, Chaoyang District, Shantou City,  
Guangdong Province, China  
T: +86-757-86819435  
F: +86-757-86898258  
Email: [yli@lgl.it](mailto:yli@lgl.it)

**爱吉尔电子(杭州)有限公司 - 汕头服务点**

中国广东省汕头市潮阳区谷饶镇东升新世界15  
栋A2108  
电话: +86-757-86819435  
传真: +86-757-86898258  
邮箱: [yli@lgl.it](mailto:yli@lgl.it)