




Rev. 0
03/25


ECO^{MINI}

SPARE PARTS

 
EXPLODED VIEW - TAB. 0

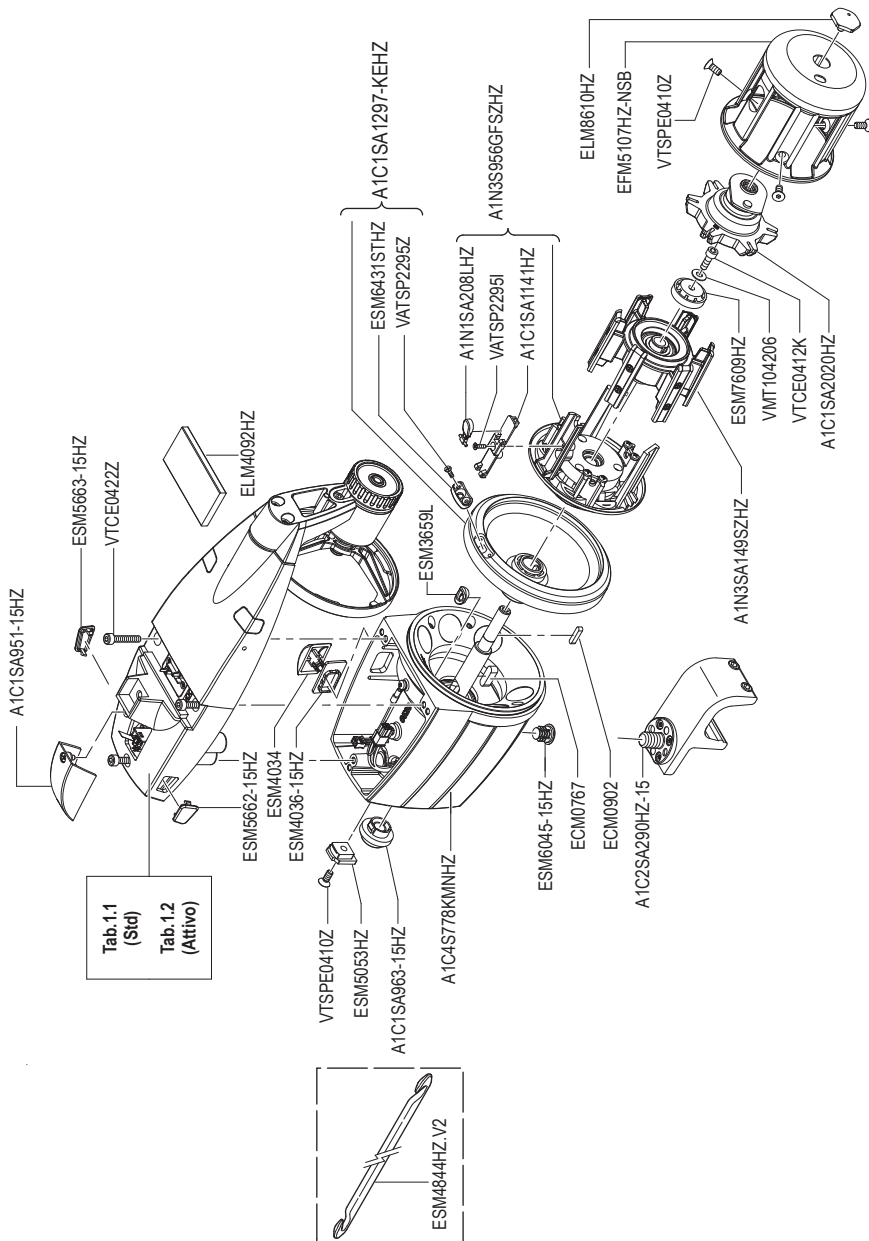

EXPLODED VIEW - TAB. 1.1


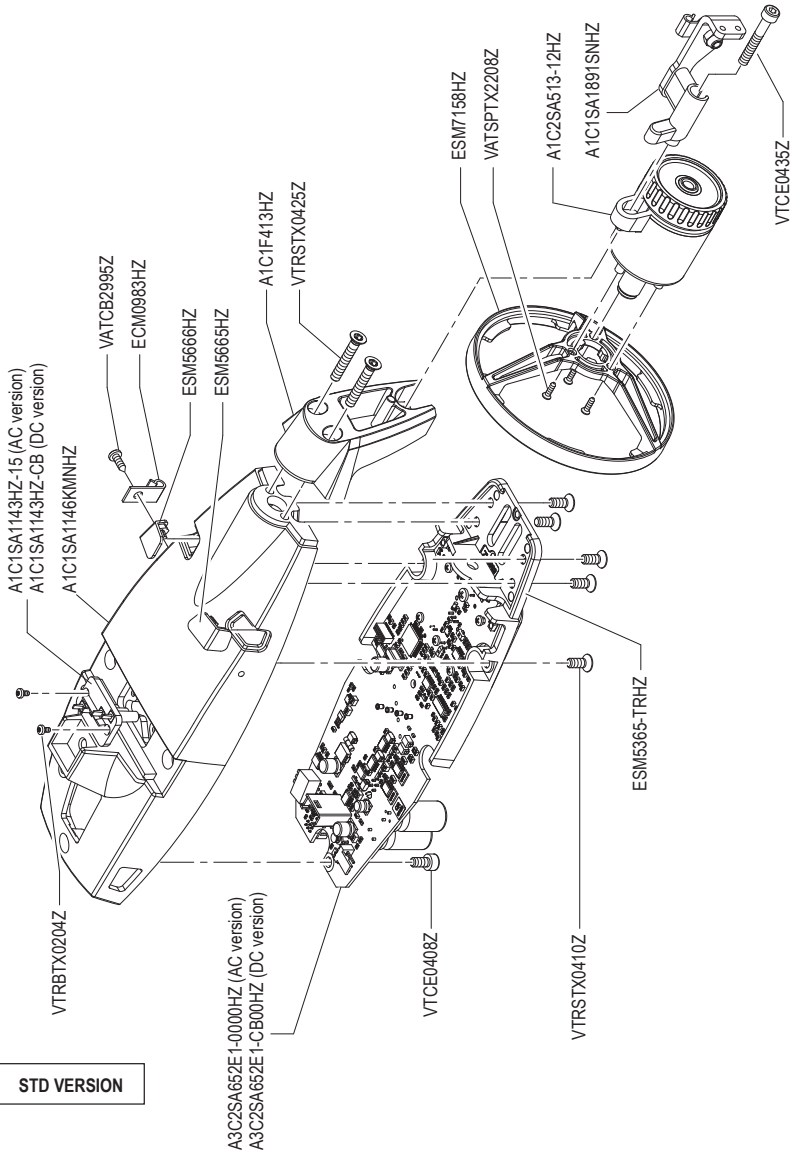 


EXPLODED VIEW - TAB. 1.2

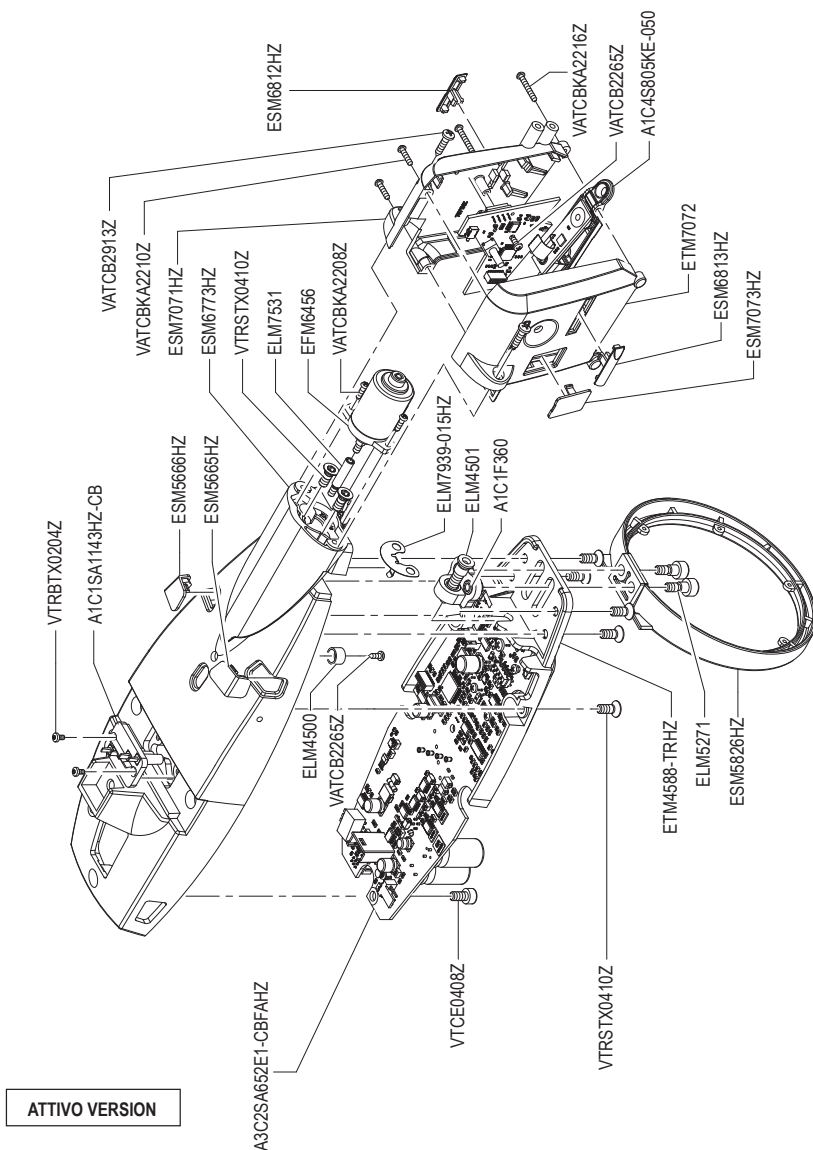 

ATTIVO VERSION

 
 
FLAT CABLE - TAB. 2.1

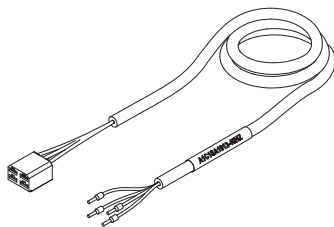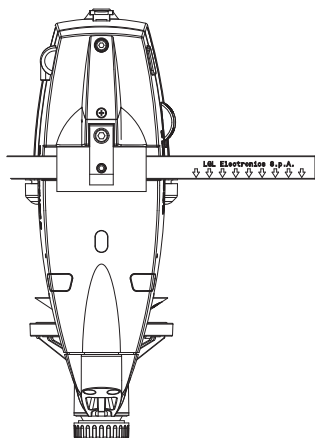

A1C1SA1912-40HZ

CONNECTION CABLE


CODICE	L=XXX (mm)
A1C1SA1000-10HZ	1000
A1C1SA1000-20HZ	2000
A1C1SA1000-30HZ	3000
A1C1SA1000-33HZ	3300
A1C1SA1000-38HZ	3800
A1C1SA1000-40HZ	4000
A1C1SA1000-48HZ	4800
A1C1SA1000-50HZ	5000
A1C1SA1000-60HZ	6000
A1C1SA1000-70HZ	7000
A1C1SA1000-80HZ	8000
A1C1SA1000M10HZ	10000
A1C1SA1000M12HZ	12000
A1C1SA1000M14HZ	14000

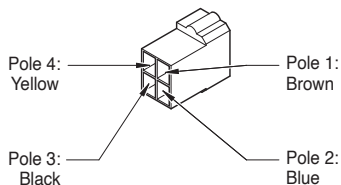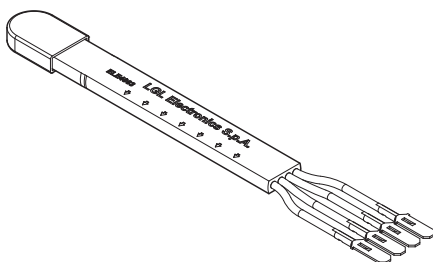  

LARGE DIAMETER AC

FLAT CABLE - TAB. 2.2


CODE (LEFT)	L=XXX (mm)
A1C2SA391H030L	3000
A1C2SA391H040L	4000
A1C2SA391H050L	5000
A1C2SA391H060L	6000
A1C2SA391H070L	7000
A1C2SA391H080L	8000
A1C2SA391H100L	10000
A1C2SA391H110L	11000
A1C2SA391H120L	12000
A1C2SA391H140L	14000
A1C2SA391H150L	15000

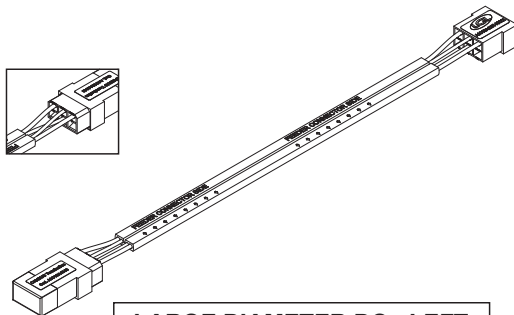 

LARGE DIAMETER DC - LEFT


EXTENSION CABLE: A1C1SA1251-XXHZ

CODE (RIGHT)	L=XXX (mm)
A1C2SA391H030R	3000
A1C2SA391H040R	4000
A1C2SA391H050R	5000
A1C2SA391H060R	6000
A1C2SA391H070R	7000
A1C2SA391H080R	8000
A1C2SA391H100R	10000
A1C2SA391H110R	11000
A1C2SA391H120R	12000
A1C2SA391H140R	14000
A1C2SA391H150R	15000

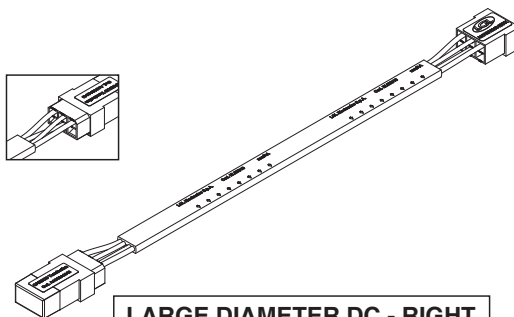 

LARGE DIAMETER DC - RIGHT

 EXTENSION CABLE: A1C1SA1218-XXHZ

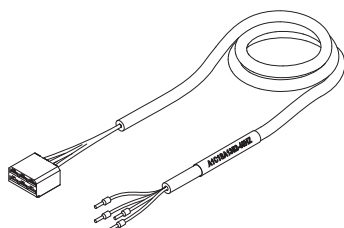

A1C1SA1352-40HZ

CONNECTION CABLE

 
OUTPUT BRAKE - TWM - TAB. 3

A1N3S930-0300HZ = $\varnothing$ springs 0.3mm

A1N3S930-0400HZ = $\varnothing$ springs 0.4mm

A1N3S930-UN00HZ = $\varnothing$ springs 0.5mm

(STD Type)

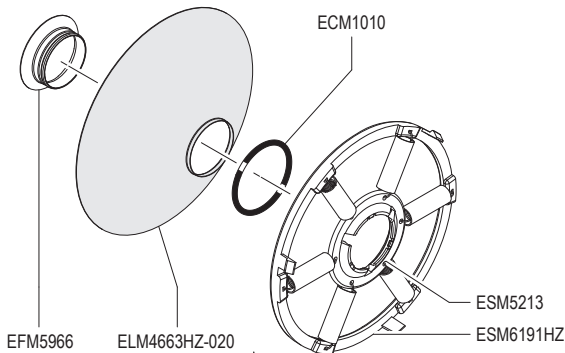


A1C1SA1436-03HZ ($\varnothing$ 0.3mm GREEN)

A1C1SA1436-04HZ ($\varnothing$ 0.4mm RED)

A1C1SA1436-UNHZ ($\varnothing$ 0.5mm YELLOW - TRANSPARENT)


A1N3S930-04KLHZ = $\varnothing$ springs 0.4mm

 (Lamina Type)

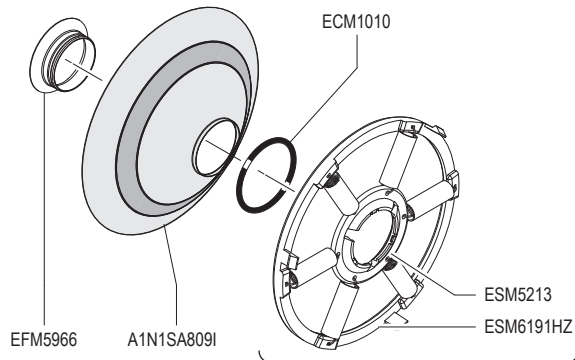


A1C1SA1436-UNHZ
($\varnothing$ 0.5mm YELLOW - TRANSPARENT)

 OUTPUT BRAKE - BRISTLE BRUSH - TAB. 4

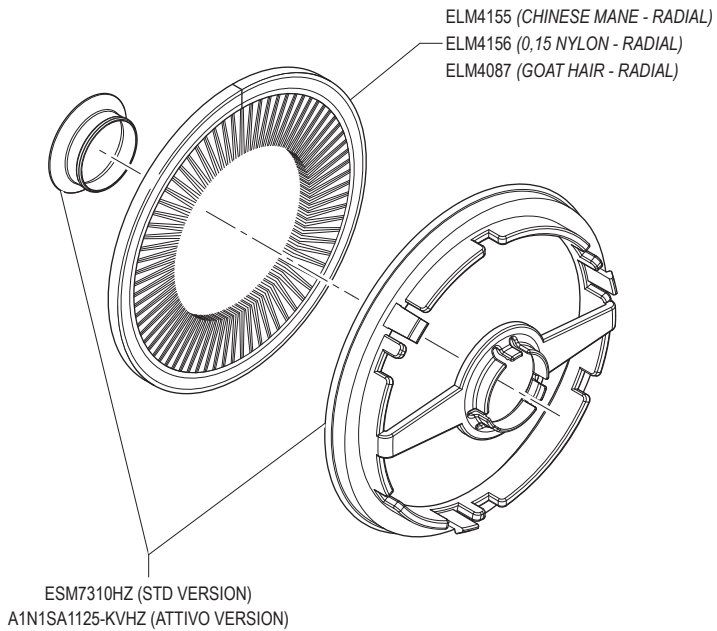


INPUT BRAKE - TAB. 5.1

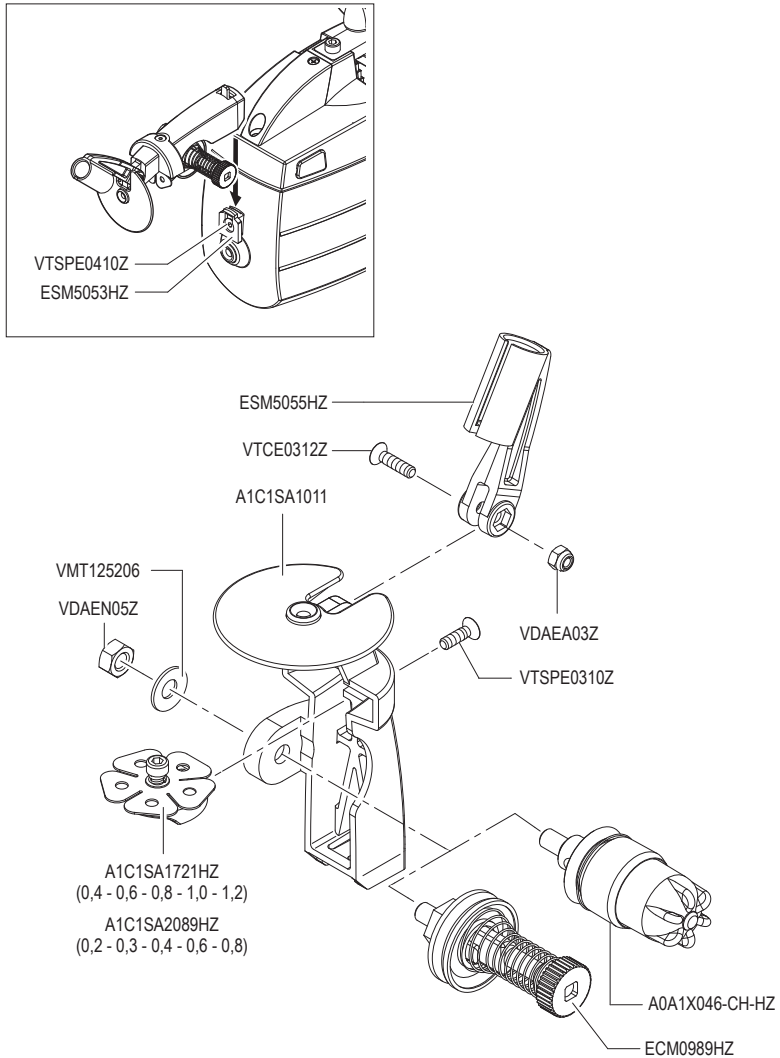 


INPUT BRAKE - TAB. 5.2

 
A1C3S900-T10HZ

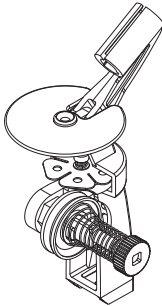


A1C3S900-S10HZ

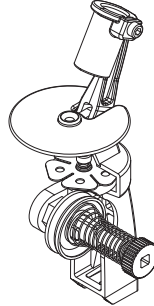 


A1C2SA207-T10HZ

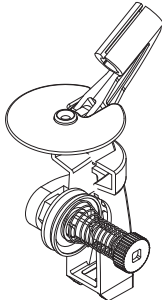 


A1C2SA207-S10HZ

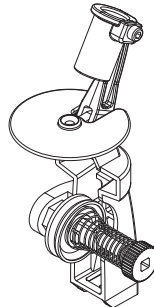 


A1C3S881-ABHZ

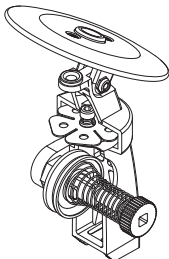 

A1C3S888-ABHZ

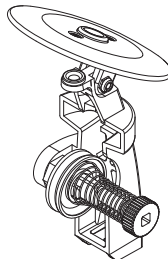 


A1C3S946-T10HZ

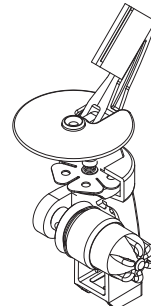 


INPUT BRAKE - TAB. 5.3

 
A1C3S929HZ

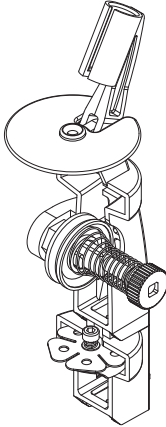


A1C3SA088-05-ABHZ

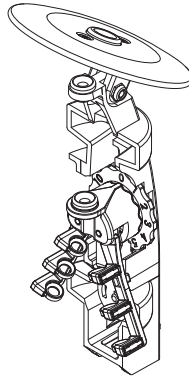 


A1C3SA088-05-T10HZ

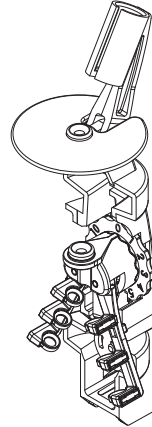 


A1C3SA089-05-ABHZ

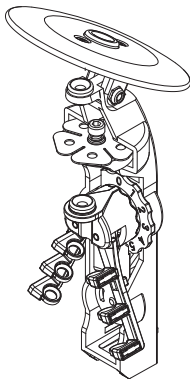 

A1C3SA089-05-T10HZ

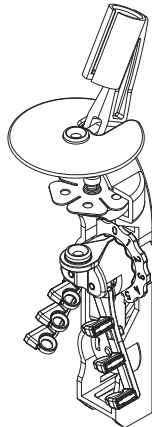 


A1C3SA089-05-S10HZ

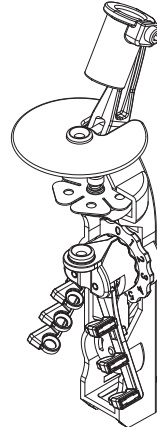 

WAXING UNIT - TAB. 5.4


FEEDER WITH ADDRESS

 A1C4S844HZ-XXX

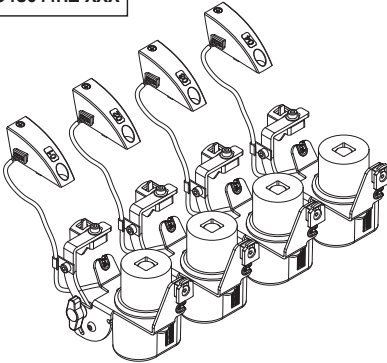


FEEDER WITHOUT ADDRESS

 A1C4S844HZ-MCR

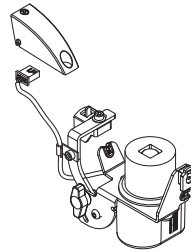


 N.B: if the feeder is equipped with address, remove connector A1C2SA250-15HZ from feeder and install kit address A1C3SA175HZ-XXX enclosed in the motorized waxing unit, which is programmed with the address of removed connector A1C2SA250-15HZ.

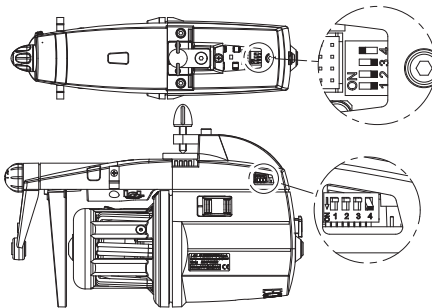


REMARK FOR FITTER: In case of absence of termination A1C1SA1348HZ at the end of flat cables, activate TERMINATION (DS4 pos. ON) on the last feeder before the end of the cable.

 SENSE OF ROTATION AND SCROLLING DIRECTION OF THE YARN

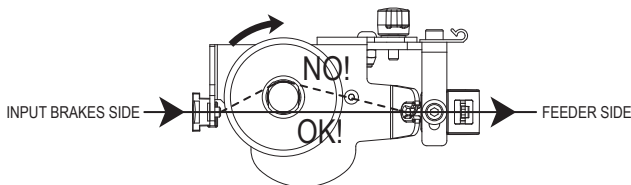


CLAMP - TAB. 6

 A2N1SA403HZ

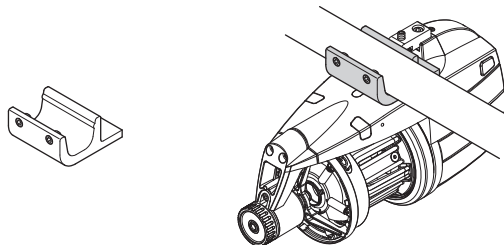


A2N1SA1321HZ-2P

 

A1C1SA1368HZ



 A2N2SA506HZ-2P

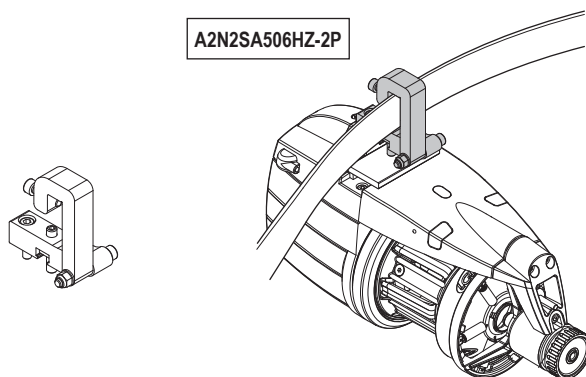

POWER KIT - TAB. 7.1

A3N1SA566HZ

 
TRANSFORMER ASSEMBLY KIT
UP TO 8/10 FEEDERS (AC)

A3N3SA035-05HZ

TRANSFORMER ASSEMBLY KIT
UP TO 5 FEEDERS (AC)


A3N3SA036-05HZ

TRANSFORMER ASSEMBLY KIT
UP TO 5 FEEDERS - ECOMINI + SPIN2 (AC)

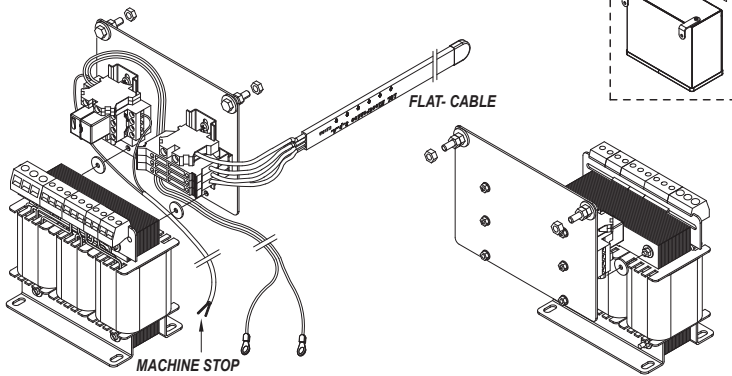


A3N2S829HZ

 DERIVATION KIT

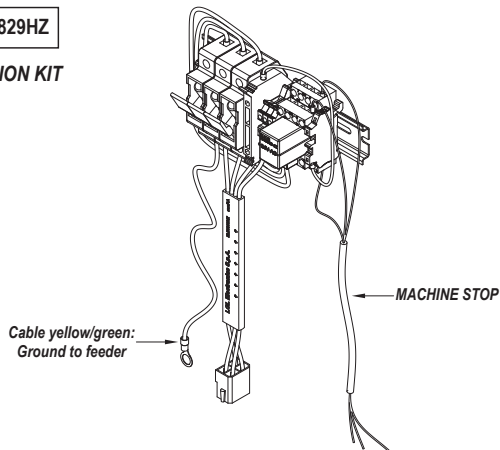


USER INTERFACE - TAB. 8.2

 
USB CONNECT
A3N2SA365-15

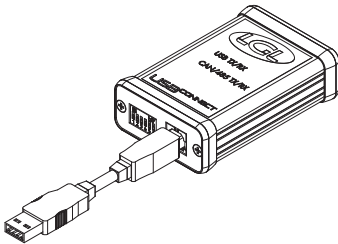

A7N1SA909-485

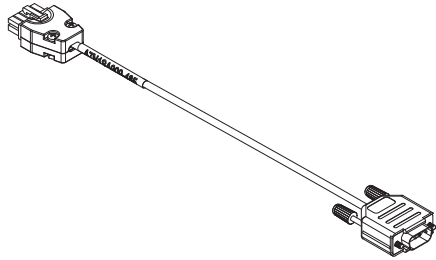 


A1C1SA1656PWHZ

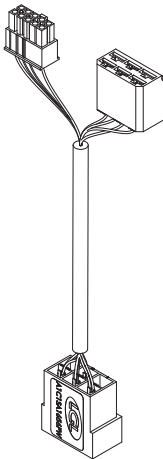 


ECM6770 + USB

 KIT ADDRESS - TAB. 9.1

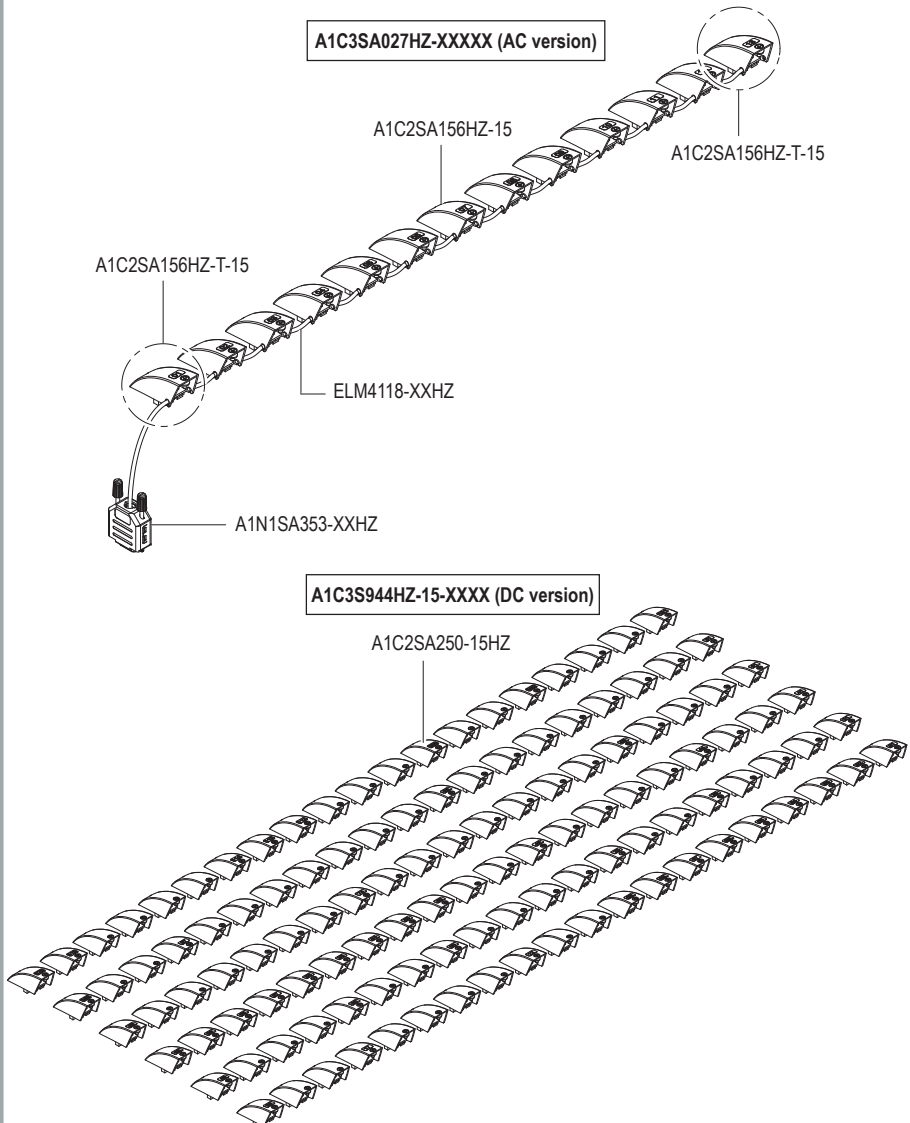


KIT ADDRESS - TAB. 9.2

 AC version
(TERMINATION)
A1C2SA156HZ-T-15

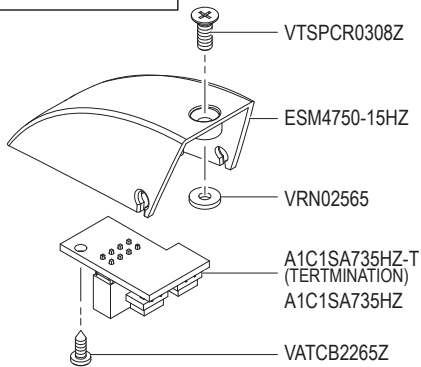


AC version
A1C2SA156HZ-15

 DC version
A1C2SA250-15HZ

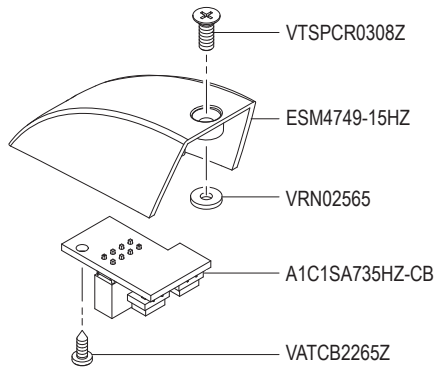


ELM4118-XXHZ

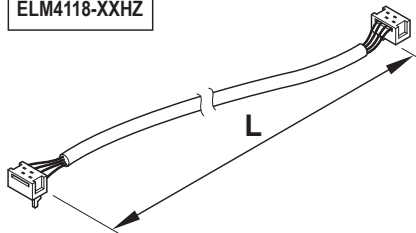 

CODICE / CODE	L
ELM4118-02HZ	200
ELM4118-05HZ	500
ELM4118-10HZ	1000
ELM4118-14HZ	1400
ELM4118-16HZ	1600
ELM4118-20HZ	2000
ELM4118-30HZ	3000
ELM4118-80HZ	8000

 A1N1SA353-XXHZ

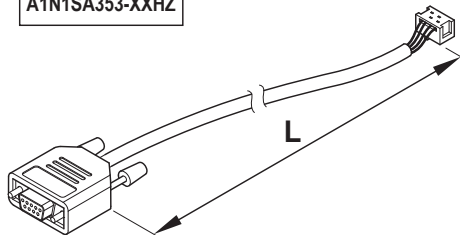

CODICE / CODE	L
A1N1SA353-15HZ	1500
A1N1SA353-20HZ	2000
A1N1SA353-40HZ	4000
A1N1SA353-60HZ	6000



L.G.L. Electronics (Hangzhou) CO.Ltd.

Building 17, 189 Hongcan Road,
Hongken Nongchang, Economic Development Zone,
Xiaoshan District, Hangzhou, Zhejiang
T: +86-571-82877258
F: +86-571-82877268
Email: lgihz@lgl.it

爱吉尔电子 (杭州) 有限公司

浙江省杭州市萧山区经济技术开发区红垦农场红
灿路189号17幢

电话 : +86 0571-82877258

传真 : +86 0571-82877268

邮箱: lgihz@lgl.it

**L.G.L. Electronics (Hangzhou) Co.,
Ltd. FOSHAN Branch**

52-54 Jin Hong Street, Textile City, Xiqiao Town,
Nanhai District, Foshan, Guangdong
T: +86-757-86819435
F: +86-757-86898258
Email: yli@lgl.it

爱吉尔电子 (杭州) 有限公司佛山分公司

广东省佛山市南海区西樵轻纺城锦虹街52-54号

电话: +86-757-86819435

传真: +86-757-86898258

邮箱: yli@lgl.it

**L.G.L. Electronics (Hangzhou) Co.,Ltd. -
SHANTOU service station**

A2108, Building 15, Dongsheng New World,
Gurao Town, Chaoyang District, Shantou City,
Guangdong Province, China
T: +86-757-86819435
F: +86-757-86898258
Email: yli@lgl.it

爱吉尔电子 (杭州) 有限公司 - 汕头服务点

中国广东省汕头市潮阳区谷饶镇东升新世界15
栋A2108

电话: +86-757-86819435

传真: +86-757-86898258

邮箱: yli@lgl.it

L.G.L. Electronics S.p.A. reserve the right to alter in any moment
one or more specifications of his machines for any technical or
commercial reason without prior notice and without any obligation
to supply these modifications to the machines, already installed.